

TC-II

Operating Instructions



Read this manual carefully before you use this product and keep it handy for future reference.

For safety, please follow the instructions in this manual.



Introduction

This manual contains detailed instructions on the operation and maintenance of this machine. To get maximum versatility from this machine all operators should carefully read and follow the instructions in this manual. Please keep this manual in a handy place near the machine.

Please read the Safety Information before using this machine. It contains important information related to USER SAFETY and PREVENTING EQUIPMENT PROBLEMS.

Notes:

Some illustrations might be slightly different from your machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Two kinds of size notation are employed in this manual. With this machine refer to the inch version.

Power Source

120V, 60Hz, 5.5 A or more

Please be sure to connect the power cord to a power source as above. For details about power source, \Rightarrow P.45 *"Power Connection"*.

Notice:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio /TV technician for help.

Warning

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note to users in Canada

Note:

.....

This Class B digital apparatus complies with Canadian ICES-003.

Remarque concernant les utilisateurs au Canada

Avertissement:

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

In accordance with IEC 60417, this machine uses the following symbols for the main switch:

means POWER ON.

O means POWER OFF.

Safety Information

When using your equipment, the following safety precautions should always be followed.

Safety During Operation

In this manual, the following important symbols are used:

A WARNING:

Indicates a potentially hazardous situation which, if instructions are not followed, could result in death or serious injury.

▲ CAUTION:

Indicates a potentially hazardous situation which, if instructions are not followed, may result in minor or moderate injury or damage to property.

A WARNING:

- Connect the power cord directly into a wall outlet and never use an extension cord.
- Disconnect the power plug (by pulling the plug, not the cable) if the power cable or plug becomes frayed or otherwise damaged.
- To avoid hazardous electric shock, do not remove any covers or screws other than those specified in this manual.
- To avoid injury, do not touch moving parts or insert your fingers in the opening during machine operation. To de-energize moving parts, open the front cover.
- Turn off the power and disconnect the power plug (by pulling the plug, not the cable) if any of the following conditions exists:
 - You spill something into the equipment.
 - You suspect that your equipment needs service or repair.
 - Your equipment's cover has been damaged.

A CAUTION:

- Protect the equipment from dampness or wet weather, such as rain, snow, and so on.
- Unplug the power cord from the wall outlet before you move the equipment. While moving the equipment, you should take care that the power cord will not be damaged under the equipment.
- When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).
- Do not allow paper clips, staples, or other small metallic objects to fall inside the equipment.
- For environmental reasons, do not dispose of the equipment or expended supply waste at household waste collection points. Disposal can take place at an authorized dealer or at appropriate collection sites.
- Be careful not to cut yourself on any sharp edges when you reach inside the machine to remove misfed sheets of paper or masters.
- Our products are engineered to meet high standards of quality and functionality, and we recommend that you only use the expendable supplies available at an authorized dealer.

How to Read This Manual

Symbols

In this manual, the following symbols are used:

A WARNING:

This symbol indicates a potentially hazardous situation that might result in death or serious injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are described in the Safety Information section.

A CAUTION:

This symbol indicates a potentially hazardous situation that might result in minor or moderate injury or property damage that does not involve personal injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are described in the Safety Information section.

* The statements above are notes for your safety.

∰Important

If this instruction is not followed, paper might be misfed, originals might be damaged, or data might be lost. Be sure to read this.

Preparation

This symbol indicates the prior knowledge or preparations required before operating the machine.

🖉 Note

This symbol indicates precautions for operation, or actions to take after misoperation.

Limitation

This symbol indicates numerical limits, functions that cannot be used together, or conditions in which a particular function cannot be used.

PReference

This symbol indicates a reference.

[]

Keys that appear on the machine's display panel.

[]

Keys built into the machine's operation panel.

What You Can Do with This Machine

Below is a quick summary of this machine's features and where to look in this manual for more information.

Standard Printing

 \Rightarrow P.15 "Standard Printing".

★ Adjusting the Print Image Position ⇒ P.20 "Adjusting the Position of Printed Images".



1: Paper feed direction



1: Paper feed direction

2: Image of Drum 2

Changing the Printing Speed

 \Rightarrow P.22 "Changing the Printing Speed".

TABLE OF CONTENTS

Machine Exterior	1
Machine Interior	2
Operation Panel	4
Keys	4
Indicators	5

1. Operation

Setting and Changing the Drum Unit	7
Setting the Drum Unit	
Changing the Drum Unit	
Printing Preparations	
Loading Paper	
Setting Up the Paper Delivery Table	
Turning on the Main Power	12
Print Paper	13
Standard Printing	15
Removing Prints	
Printing onto Various Kinds of Paper	17
Printing onto Thick Paper	
Printing onto Standard Paper	17
Printing onto Special Kinds of Paper	
Paper Supply Adjustment	
Adjusting the Position of Printed Images	20
Changing the Printing Speed	22
Skip Feed Printing	23

2. User Tools

Accessing the User Tools	25
User Tools	26
1. System	

3. Troubleshooting

If Your Machine Does Not Operate as You Want	29
If You Cannot Make Prints as You Want	30
Loading Paper	31
When the Add Ink Indicator (心) Lights	32
℅ Clearing Misfeeds	35 36
Poor Printing Dirty Background When the Press Roller is Dirty Faint Prints	39 41

4. Remarks

Do's and Don'ts	43
Where to Put Your Machine	44
Environment	44
Power Connection	45
Machine Clearance	45
Maintaining Your Machine	46
Cleaning the Main Frame	

5. Specifications

Main Frame	47
Consumables	49
INDEX	50

Machine Exterior



ZBRH010E

1. Front door

Open to access the inside of the machine.

2. Operation panel

 \Rightarrow P.4 "Operation Panel".

3. Paper feed tray down key

Press to lower the Paper feed tray.

4. Paper feed side plates

Prevent paper being fed skewed.

5. Paper feed tray Set paper here.

6. Paper feed side plates knob Use to move the side plates.

7. Paper feed side plates knob lock lever

Fix to the paper feed side plates knob.

Machine Interior



1. Main switch

Use to turn the power on or off.

2. Paper alignment wings

Lift or lower the wings depending on the type of paper being used.

3. Paper delivery end plate

This plate aligns the leading edge of prints.

4. Paper delivery end plate knob

Use to move the end plate.

5. Paper delivery tray

Completed prints are delivered here.

6. Paper delivery side plates

These plates align the prints on the paper delivery tray.

7. Paper delivery side plate knobs Use to move the side plates.

8. Drum Unit 2 The master is wrapped around this unit.

9. Drum Unit 1

The master is wrapped around this unit.

10. Ink holder Set the ink cartridge in this holder.

11. Drum unit lock lever B1

Lower to unlock and pull out the drum unit.

12. Trailing edge guides Swing out these guides when you use B5D paper.



Operation Panel





1. [Drum2] key

Press when you need to set or change the Drum $2 \Rightarrow P.7$ "Setting the Drum Unit".

2. [Drum1] key

Press when you need to set or change the Drum $1 \Rightarrow P.7$ "Setting the Drum Unit".

3. [Ppr.Type] key

Press to select the paper type \Rightarrow P.17 "Printing onto Various Kinds of Paper".

4. [Ppr. Supply Adj] key

Press to change the paper feeding ratio and paper separation ratio. \Rightarrow P.18 "*Paper Supply Adjustment*".

5. [◄] [▶] keys (Speed keys)

Press to adjust the printing speed. \Rightarrow P.4 "Keys", \Rightarrow P.22 "Changing the Printing Speed".

6. [Position Adj/Whole] key

Press to adjust the mixed image positions of Drum1 and Drum2 \Rightarrow P.20 "Adjusting the Position of Printed Images"

7. [⊲][▷][△][▽] keys

Press to shift the image forward, backward, right, or left. \Rightarrow P.4 "*Keys*", \Rightarrow P.20 "*Adjusting the Position of Printed Images*".

Also use to highlight items you wish to select on the panel display.

8. [Clear/Stop] key Press to stop printing.

9. [#] key

Use to enter data in selected modes.

10. [Print] key Press to start printing.

11. [Proof] key

Press to make proof prints.

12. [Clear Modes] key

Press to clear any previously entered job settings.

13. Number keys

Press to enter the desired number of prints and data for selected modes.

14. Counter

Displays the number of prints entered. While printing, it shows the number of prints remaining.

15. [Position Adj/Drum2] key

Press to adjust the image position's of Drum2.

16. [Skip Feed] key

Press to select skip feed printing. \Rightarrow P.23 "Skip Feed Printing"

17. [User Tools] key

Press to change the default settings to meet your requirement.

Indicators



1. Error Indicators

These indicators are lit when a non-standard condition occurs within the machine.

2. Guidance Display

Display the machine's condition.

3. Counter

Displays the number of prints entered. While printing, it shows the number of prints remaining.

4. Speed Indicators

These indicators show the printing speed that is selected.

5. Drum set indicator

The green indicator lights when the drum unit is ready to pull out. If not ready, the red indicator lights.



1. Operation

Setting and Changing the Drum Unit

Before you start printing, you must make a master print using the master making unit. The master print is wrapped around the drum unit.

🖉 Note

- Color drum units are available as options in addition to the standard black unit. For making color prints, a separate drum unit is necessary for each color.
- Insert the same kinds of drum unit for both Drum 1 and Drum 2.
- □ Color Drum Type 50S/80S is not available for this machine.
- □ A4 size master cut drum is not available for this machine.

Setting the Drum Unit

1 Make sure that you select either [Drum1] or [Drum2] before setting the drum unit.



🖉 Note

□ Make sure that the indicator is lit.

2 Open the Front Door.



Lift upper drum stay B3 a little to unlock the drum unit, then push into the drum unit while holding drum unit handle B2 and upper drum stay B3.



🖉 Note

- Make sure the green light beside the drum unit lock lever is on.
- □ If the red light is on, go back to step 1.

□ Make sure that the drum unit lock lever B1 is released.



Insert the drum unit along the guide rail.



5 Slide in the drum unit until it locks in position.



🖉 Note

Insert the same kinds of drum unit for both Drum1 and Drum2. **6** Lift drum unit lock lever B1.







🖉 Note

- □ If you want to set another drum unit, go back to step 1.
- □ Make sure that the Open Cover Indicator turns off.

Changing the Drum Unit

Make sure that you select either [Drum1] or [Drum2] before changing the drum unit.

2 Open the front door.

Make sure the green light beside the drum unit lock lever is on before sliding out the drum. If the red light is on, go back to step **1**.



Lower the drum unit lock lever B1.



5 Pull out drum unit handle B2 slowly.



C Lift upper drum stay B3 a little to unlock the drum unit, then pull out the drum unit while holding drum unit handle B2 and upper drum stay B3.



∰Important

- □ Be careful not to let the drum unit fall.
- **U** Insert the color drum unit along the guide rail.
- **E** Lower drum unit lock lever B1 of the inserted drum.
- Slide in the drum unit until it locks in position.
- Lift drum unit lock lever B1.
- **1** Close the front door.
 - Note 🖉
 - □ Make sure that the Open Cover indicator turns off.

Printing Preparations

Loading Paper

1 Carefully open the paper feed tray.



2 Lift the feed side/end plates.



B Make sure that the lock lever for the side plate is raised (lock is released), and then grasp the side plate knob and adjust the side plate to match the paper size.



∰Important

- Always adjust the position with the lock lever for the paper feed side plates in the raised position (lock released).
- Place the paper on the paper feed tray.



🖉 Note

Correct the paper curl before loading the paper. If you cannot do so, stack the paper with the curl face down.

PReference

 \Rightarrow P.13 "Print Paper"

• Make sure that the paper feed side plates are touching both sides of the paper, and then push the lock lever for the side plates down to lock the side plates into position.



∰Important

Always make sure that you push the lock lever for the side plates down to lock the side plates in position.

🖉 Note

Make sure that the paper size and direction in the panel display correspond with the actual paper size and direction set on the paper feed tray.

Setting Up the Paper Delivery Table

1 Open the Paper Delivery Table.



2 Lift the paper delivery plates and adjust the side plates to the paper size.



🖉 Note

□ The inside of the side plates should align with the paper size scale.

Adjust the paper delivery end plate to match the print paper size.



🖉 Note

□ The inside of the end plate should align with the paper size scale.

When you use thick paper (81.4 g/m^2 to 209.3 g/m^2 , 21.6 lb to 55.6 lb)

Adjust the side plates to match the paper size scale on the main frame side.

When you use standard paper $(52.3 \text{ g/m}^2 \text{ to } 81.4 \text{ g/m}^2, 13.9 \text{ lb to } 21.6 \text{ lb})$

Adjust the side plates to match the paper size scale on the end plate side.

Lower or lift the paper alignment wings.



🖉 Note

- When the guides are up, you might not be able to load the unit to full capacity (1,000 sheets) depending on the paper you are using.
- □ Lift the paper alignment wings when B5□ prints are curled.

When you use 81.4 g/m², 21.6 lb or thicker paper

• Lower the paper alignment wings.

When you use B5D paper

• Swing out the trailing edge guides.



Turning on the Main Power

- **1** Make sure that the power cord is firmly plugged into the wall outlet.
- **2** Turn on the main power switch.



ZBRH070E

Print Paper

The following limitations apply:

	Paper S	Paper	
	Metric	Inch	Weight
Paper feed tray	A3 D, B4 D, A4 D, B5 D, Others (Vertical: 70 - 297mm, Horizontal: 250 - 432mm)	$8^{1}/2^{"} \times 11^{"} \square$, Others (Ver-	52.3 - 209.3g/m², 13.9 - 55.6 lb

Non-recommended paper and envelope:

- Roughly cut paper/envelope
- Paper of different thickness in the same stack
- Envelopes heavier than 85g/m², 22 lb.
- Folded, curled, creased, or damaged paper
- Torn paper
- Slippery paper
- Rough paper/envelope
- Paper with any kind of coating (such as carbon)
- Short grain paper
- Thin paper that has low stiffness
- Paper that is prone to generate a lot of paper dust
- Grained paper loaded with the direction of the grain perpendicular to the feed direction
- Certain types of long thin envelopes e.g. international mail envelopes
- The following types of envelopes:



🖉 Note

□ If you print on rough grained paper, the following problems may occur:

- Black-Spotted image
- Blurred image
- Damaging master

∰Important

Correct curls in the paper before placing it in the machine. When you cannot correct the paper curl, stack the paper with the curl face down or face up as shown in the illustration. If paper is curled, it might wrap around the drum or stains might appear.

	Right	Wrong
Thin Paper		
Thick Paper		TPEY990E

Standard Printing

Set the Drum Unit.

Reference

 \Rightarrow P.7 "Setting the Drum Unit"

2 Make sure that the machine is ready for printing.

B Make sure that there are no previous settings remaining.

🖉 Note

□ To clear any previous settings, press the **[Clear Modes]**.

4 Set the paper

Reference

 \Rightarrow P.10 "Loading Paper"

5 Select the Paper type

Reference

 \Rightarrow P.17 "Printing onto Various Kinds of Paper"

6 Set your desired settings.

2 Press the **[Proof]** Key.



🖉 Note

□ If the Image position is not correct, adjust it by using **[Whole]** or **[Drum 2]**. ⇒ P.20 "Adjusting the Position of Printed Images".

- □ If the image density is slightly dark or light, adjust the image density, using [◄] [►] Speed keys. ⇒ P.22 "Changing the Printing Speed".
- Enter the number of prints required with the number keys.



🖉 Note

The counter shows the number of prints you set.



□ To change the number entered, press the **[Clear/Stop]** key and enter the new number.

9 Press the **[Print]** key.





- To stop the machine during a multi-print run, press the [Clear/ Stop] key.
- □ To return the machine to the initial condition after printing, press the **[Clear Modes]** key.

Removing Prints

Pull the front paper delivery side plate down towards you to open it.



2 Remove the prints from the paper delivery tray and close the paper delivery side plate.



Auto Reset

The machine returns to its initial condition automatically after your job is finished. This function is called "Auto Reset".

Note 🖉

- □ You can change the time the machine can waits before Auto Reset mode starts.⇒ P.26 "User Tools".
- The machine will not automatically enter Auto Reset mode in the following cases:
 - If there is no ink
 - If paper misfeed occur
 - If the machine is printing
 - If there is no paper
 - If the cover open message is displayed

Auto Off

If you do not operate the machine for a certain period the machine can enter Quality Standby mode to remove ink from inside the machine, and then turn itself off. This function is called "Auto Off".

Limitation

Quality Standby mode does not available when you use Color Drum Type 40S/50S.

🖉 Note

□ You can change the time the machine can waits before Auto Off mode starts.⇒ P.26 "User Tools".

Printing onto Various Kinds of Paper

Before printing onto thick paper, thin paper, envelopes or special kinds of paper loaded in the Paper feed tray, you must select the paper type.

Printing onto Thick Paper

If you wish to print onto thick (157 to $209.3g/m^2$, 42 to 55.6 lb or heavier) paper, perform the following steps.

Press the [Ppr.Type] key.



2 Select [2:THICK] with $[\triangleleft] [\triangleright]$ key.

PAPER TYPE 1:STD 2:THICK 3:SPL **

B Press the [#] key.

Printing onto Standard Paper

Press the [Ppr.Type] key.



2 Make sure that [1:STD] is selected.

PAPER	TYPE	1	:STD
2:THIC	X 3:SPI		**

Press the [**#**] key.

Printing onto Special Kinds of Paper

Press the [Ppr.Type] key.



Select [3:SPL] with [⊲] [▷] key.

PAPER	TYPE	1	:STD
2:THIC	жз:spL		**

Press the **[#]** key.

Printing onto envelopes

Place the envelopes in the paper feed tray as shown in the illustration.



*: Paper feed direction

🖉 Note

- When you use envelopes, the Paper feed tray capacity is about 150 sheets (85g/m², 22 lb) or enough to load a stack up to 105mm, 4.1" high.
- If your envelopes do not feed in well, lift the paper feed tray a little, and then lower it so that it slants up slightly.



Paper Supply Adjustment

If paper misfeeds occur frequently, you can adjust the paper feeding ratio and paper separation ratio.

Press the [Ppr. Supply Adj] key.



FEED PRES.	0123456**
SEPAR PRES	0123456**

- 2 Press [⊲] [▷] [△] [▽] or the number keys to adjust the paper feeding ratios and the paper separation ratios.
- Press [#] key.

If the machine does not feed enough paper

• Change the paper feeding ratio setting as follows.

Paper type	Paper feed pres- sure ratio
Standard	5~6(*3)
Thick	6(*5)
Special kinds of Paper	5~6(*3)

*: Default

If the machine feeds too much paper

• Change the paper separation ratio setting as follows.

Paper type	Paper feed sepa- ration ratio
Standard	4~6(*3)
Thick	3~4(*2)
Special kinds of Paper	3~4(*1)

*: Default

Adjusting the Position of Printed Images

Use the following procedure to adjust the position of print images as required.

Solution Note

- □ Unexpected change to the image position may occur with the following actions:
 - Switching Drum1 and 2.
 - Remaking a master using the master making unit.
 - Changing the print speed.

There are two kinds of image adjustment as follows:

Overall Image Adjustment

You can adjust the mixed image position of Drum1 and Drum2.



1: Paper feed direction

Drum2 Image Adjustment

You can adjust the image position of Drum2.



1: Paper Feed Direction 2: Image of Drum2

Note Note

- □ When the main switch is turned off, the image returns to the default position.
- Press the [Whole] or [Drum 2] key.
 - IMAGE ADJUST OVERALL **▲**♥0.40in.4▶0.40in
- **2** Adjust the image position using the $[\triangleleft], [\triangleright], [\triangle], and <math>[\nabla]$ keys.



🔗 Note

- When you shift the image forward, leave a 10mm, 0.4" margin at the leading edge. If there is no margin, paper might wrap around the drum and cause a misfeed.
- □ If you adjust the image position, a print shadow might appear.

Overall image adjustment

You can change the overall image position of both Drum 1 and 2. Use [<] [▷] [△] [▽] keys to shift the image each way in 0.5mm, 0.02" steps.</p>

Up & Down	Right & Left
+10mm, 0.4" or -	+10mm, 0.4" or -
10mm, 0.4"	10mm, 0 4"

Drum 2 image adjustment

You can change the image position of Drum 2. Use [<][▷] [△][○] keys to shift the image each way in 0.25mm, 0.01" steps.

Up & Down	Right & Left
Moving sums of both adjustment functions (Max 10mm, 0.4")	+5mm, 0.2″ or - 5mm, 0 2″

Press the [Enter] key.

Press the **[Proof]** key to check the image position.



Changing the Printing Speed

Use the **[]** or **[)** key to adjust the printing speed. The relationship between printing speed and print quality depends on the type of paper you use.

Press the [▶] key to increase the speed and press the [▲] key to reduce the speed.



🖉 Note

- □ The following speeds are available:
 - Setting 1 (default): 90 sheets/minute
 - Setting 2: 105 sheets/minute
 - Setting 3: 120 sheets/minute
- □ The faster the printing speed becomes, the lighter the printing density is, and vice versa.
- □ If you change the print speed while printing, a print shadow might appear.
- When the machine is used in low temperature conditions, the image density might decrease. In this case, use setting one.

Skip Feed Printing

If the backs of prints are dirty, you can increase the time between prints using the **[Skip Feed]** key. By default, when one sheet of paper is fed the drum rotates once. However, you can select the number of rotations of the drum. This gives you the chance to remove prints one by one from the paper delivery tray or insert one sheet of paper between two prints. If you use this function, you can also use paper longer than 432mm, 17.0" in spite of the maximum length limitations of paper.

🖉 Note

- □ Two rotations per sheet of paper is the default. You can change this default setting with the user tools. See "No. of Skip Feed" ⇒ P.23 "Skip Feed Printing".
- □ The maximum length of paper in Skip Feed mode is 460mm, 18.1".
- When you use paper longer than 432mm, 17.0", completed prints will not be delivered to the paper delivery tray properly, so lower the paper delivery end plate and receive completed prints by hand.

Press the [Skip Feed] key.



If necessary, select the number of rotations of the drum per sheet of paper fed with the [<] [▷] keys.</p>

SKIP F	EED	NO SETT	ING
INPUT	THE	NUMBER	¥

🖉 Note

- You can also select the number of rotations with the Number keys.
- □ You can select from 2 to 9 rotations.
- □ By default, the machine asks you to confirm the number of rotations. You can have this step omitted by adjusting the user tool settings. See "No. of Skip Feed" ⇒ P.26 "User Tools".

Press the **[#]** key.

4 Press the **[Start]** key.



5 Check the image position of the trial or proof print.

🖉 Note

□ If the image position is not correct, adjust it using the [Whole] or [Drum2] key (⇒ P.20 "Adjusting the Position of Printed Images").

6 Make your prints.

2. User Tools

Accessing the User Tools

The user tools allow you to customize various default settings. This section is intended for the machine administrator.

Press the [User Tools] key.



Using the [\triangle], or [∇] key

Search for the desired user tool number with the [△], [▽], key.



Using the number keys

Enter the desired user tool number with the Number keys.



- 2 Change the settings by following the instructions on the panel display. Then press the **[#]** key.
- Press the [User Tools] key to return to the standby display.



🔗 Note

□ The settings are not canceled even if the main switch is turned off or the **[Clear Modes]** key is pressed.

User Tools

\mathcal{P} Reference

For how to access the user tools, \Rightarrow P.25 "Accessing the User Tools".

1. System

No.	Mode	Description
1 Auto Reset Time		The machine returns to its initial condition automatically after your job is finished. The automatic reset time can be set from 1 to 5 minutes or off (0 minute).
		 Note Default: Off
2	Resettable Count	The counter shows the number of prints you made.
3	Clr Resettable Count	Choose whether the total number of prints is reset.
4	Max Print	The maximum print quantity can be set between 1 and 9999.
5	Total Counter	Use to display the total number of prints.
6	Buzzer Off	 Turns the beeper on or off. Note Default: <i>STD</i>. (standard) Available settings: 0: KEY OFF (When you press a key, the beeper does not sound. When warning messages appear on the panel display, the beeper sounds.) 1: ON (The beeper sounds when you press a key or when warning messages appear on the panel display.) 2: OFF (The beeper does not sound when you press keys or when warning messages appear on the panel display.)
7	Auto Off	 If you do not operate the machine for a certain period the machine can enter Quality Standby mode to remove ink from inside the machine, and then turn itself off. This function is called "Auto Off". The time can be set from 10 to 90 minutes. Note Default: 60 minutes Quality Standby mode does not available when you use Color Drum Type 40S/50S.
No.	Mode	Description
-----	-------------------------	---
8	Jump Table	You can change the angle of the wing guide depending on the paper type you use.
		🖉 Note
		Default: Auto
		□ Available settings:
		• Up (Select this setting when standard thickness or thin pa- per misfeeds at the paper exit section occur frequently.)
		 Down (Select this setting when A4-B5, 8¹/₂"×11" thick paper is not delivered properly to the paper delivery tray.)
9	Drm Stp Mode	You can select the drum which you will be able to pull out imme- diately after you finish your job without pressing any key.
		Ø Note
		Default: Drum 1
10	Long Sheet Mode	You can select whether you can use paper longer than 432mm,17.0" or not.
		Default: Not to use
		When you use paper longer than 432mm, 17.0", lower the paper delivery end plate and receive completed prints by hand.
11	Skip Number of Time	Specifies the number of drum rotations in Skip Feed mode when the power is turned on.
		You can also select whether you can change the number of drum rotations temporarily when you press the [Skip Feed] key. \Rightarrow P.23 " <i>Skip Feed Printing</i> "
		□ Default:
		Number of Skip Feed: 2
12	Skip Display On Mode	When you press [Skip Feed] key, you can select whether optional print counts display shows up or not.
		🖉 Note
		Default: <i>Off</i>
13	Total Counter Down	The copy counter can be set to show the number of copies made (Count Up), or the number of copies remaining to be made (Count Down).
		Note
		 Default: Yes (Count Down)
14	Print Position	You can register the settings of print image position.
15	Feed Setup	You can register the settings for frequently use.
	- con occup	

3. Troubleshooting

If Your Machine Does Not Operate as You Want

If a malfunction or a misfeed occurs, the following messages will appear on the panel display.

Message	Meaning
RE-ENTER COPY NUMBER	The number of prints exceeds the maximum print quantity. You can change the maximum number of prints that can be made in one operation with the user tools. \Rightarrow P.26 "User Tools".
DRUM1:	Slide in the drum until it clicks.
SET COMPLETELY	Make sure that the drum is completely set in position.
SC*-**TEL*********	Turn the main switch off and on.
CALL SERVICE	If the message appears again, contact your service representative.
COLD DRUM NOT TO USE 3RD SPEED	Slow down the printing speed, and then press print key.
DRUM1 UNSITABLE	Insert the same kinds of drum unit for both Drum1 and Drum2.
DRUM TYPE	If the message appears again, contact your service representative.

\widehat{V} When a service call message is shown on the panel display panel

.

Turn the main switch off and back on again. If a service code appears again, contact your service representative.

If You Cannot Make Prints as You Want

Problem	Cause	Action
Misfeeds occur frequently.	Improper paper type is select- ed.	Select proper paper type. ⇒Refer to the master making unit's operating instructions.
Parts of the image are not printed.	The image is too wide.	 Set larger size paper. Return the drum unit to the master making units, and then reduce the print image size.
Print shadow appears.	The background image densi- ty is too high.	Switch drum 1 and 2.Set thick paper.
The print image appears too light.	The print speed is too fast.	Lower the print speed.
Scratches appear on the print image.	Sharp edges in the machine may have scratched your prints.	Increase the print speed.Set thick paper.
The images of drum 1 and 2 do not mix well together.	If the image density is too high, the background color might appear strong.	Switch drum 1 and 2.Use the image of drum 1 for background.
2nd printing with another drum is unsatisfactory.	The 1st print image is still wet.	Wait until the 1st image be- comes dry.
Roller marks appear when you print onto the reverse side of paper.	1st printed image is still wet and the press roller becomes dirty.	 Wait until the 1st printed image becomes dry. Wipe off the ink on the press roller. ⇒ P.41 "When the Press Roller is Dirty"
An uneven solid image appears.	Large solid image wrinkles the master.	 Increase the print speed. Set thick paper. Use Drum2 for a large solid image. Use Quality Standby mode by pressing the [Clear Mode] key for more than 3 seconds. Return the drum unit to the master making unit, and then remake the master with economy mode or quality start mode. When you make master, make a few trial prints, and then return the drum unit to this machine. ⇒Refer to the master making unit operating instructions.

Loading Paper

The **Load Paper** indicator (**b**)lights when the paper feed tray runs out of paper.

Limitation

- Load paper when the paper feed tray is empty. Do not add paper when some paper is left in the tray. Doing so may cause problems, such as multiple feeds and misfeeds.
- If you use a variety of paper while printing, a print shadow might appear.

Reference

For available paper sizes, \Rightarrow P.13 "*Print Paper*".

1 Load the paper in the Paper feed tray.



🖉 Note

□ Correct any paper curl before loading the paper.

2 Adjust the paper feed side plate to match the paper size.



When the Add Ink Indicator (述) Lights

The **Add Ink** indicator (📥) lights when it is time to supply ink.

A CAUTION:

• If ink comes into contact with your eyes, rinse immediately in running water. In the case of any abnormal symptoms, consult a doctor.

A CAUTION:

• Keep the ink or ink container out of the reach of children.

A CAUTION:

• If ink is ingested, force vomiting by drinking a strong saline solution and consult a doctor immediately.

A CAUTION:

• Our products are engineered to meet high standards of quality and functionality, and we recommend that you only use the expendable supplies available at an authorized dealer.

🖉 Note

- **D** Be sure to supply ink of the same color as the current drum.
- □ Ink is readily removed from skin by waterless hand cleaners followed by washing with soap and water.
- D Be careful not to get any ink on your clothing.
- □ Store ink under low temperature and humidity conditions.
- Do not store ink where it will be exposed to heat or direct sunlight.
- □ Store on a flat surface.

Open the front door.

2 Pull out the ink holder.



3 Remove the used ink cartridge.



Remove the cap of the new ink cartridge.



5 Insert the new cartridge into the ink holder.



🖉 Note

□ Always supply ink of the same color.

6 Return the ink holder to its original position until it clicks.



2 Close the front door.

The machine will start idling to supply ink to the drum.

33

% Clearing Misfeeds

A CAUTION:



Be careful not to cut yourself on any sharp yellow edges when you reach inside the machine to remove misfed papers.

🖉 Note

- □ After clearing misfeeds, make sure that all the doors, covers, and units are closed and the **%** indicator is off.
- To prevent misfeeds, do not leave any torn scraps of paper in the machine.
- When clearing misfeeds, do not turn off the main switch. If you do, your print settings will be cleared.
- □ If misfeeds occur repeatedly, please contact your service representative.

Paper Misfeed in the Paper Feed Section



•

WTo prevent paper misfeeds:

Check the following before restarting the printing run.

• Did you select an appropriate paper type with the **[Ppr.Type]** key?



• Are the side pads in the correct positions?



To print on thin paper $(52.3g/m^2, 13.9 \text{ lb})$, slide the levers behind the paper feed side plates in the direction of the arrow (see illustration).

• When paper is curled, correct the curl as shown.



• When paper edges stick together or paper is not fed in, shuffle the paper as shown.



• When printing onto envelopes or thick paper, lower the printing speed. ⇒ P.22 "Changing the Printing Speed".



• When a multi-feed occurs or the paper is skewed, make sure that the paper feed side plates are properly adjusted. When you load paper on the paper feed tray, make sure that the paper edge touches the back fence and paper is placed on the proper paper size scale. Only use paper where the leading edge has two right angle corners.

Pull out the misfed paper gently

Paper Misfeed in the Paper Feed Section

REGISTRATION JAM REMOVE PAPER

- **1** Open the front door.
- **2** Lower drum unit lock lever B1.







🖉 Note

□ For how to take out the drum unit, \Rightarrow P.9 "Changing the Drum Unit".

from the inside.



5 If you cannot remove the misfed paper from the inside, remove from the Paper feed tray.



6 Set the drum unit and close the front door.

....

VTo prevent paper misfeeds:

.

 \Rightarrow P.34 "Paper Misfeed in the Paper Feed Section".

Paper Wrapped around the Drum

When paper is wrapped around the drum



- **1** Open the front cover.
- **2** Lower drum unit lock lever B1.



1 Take out the drum.





🖉 Note

□ For how to take out the drum unit, \Rightarrow P.9 "Changing the Drum Unit".

Remove the misfed paper from the drum.



- **5** If you cannot find misfed paper in step **2**, remove misfed paper from the press roller.
- **6** Set the drum unit and close the front door.

When paper is misfed inside the machine

DRUM1:DELIVERY JAM REMOVE PAPER

1 Open the front cover.

2 Lower drum unit lock lever B1.



1 Take out the drum.





🖉 Note

- □ For how to take out the drum unit, \Rightarrow P.9 "Changing the Drum Unit".
- Δ

Remove the misfed paper from the inside as shown in the illustration.





b If you cannot remove the misfed paper, remove paper from the press roller.

5 Set the drum unit and close the front door.

To prevent paper misfeeds:

If the paper is curled or the original's leading edge margin is too narrow, the following action is necessary.

• When you use curled paper, correct the curl as shown.



• If you want to know more details about leading edge margin, refer to the master making unit's operating instructions.

.

Paper Misfeed in the Paper Exit Section

1 Slowly but firmly pull out the misfed paper.



$\mathbf{\hat{V}}$ To prevent paper misfeeds:

When a thin paper misfeed in the paper exit section occurs, reduce the printing speed with the $[\triangleleft] [\triangleright]$ [Speed] keys (\Rightarrow P.22 "*Changing the Printing Speed*"). If you cannot reduce the printing speed, move the end plate toward the paper delivery tray edge.

Poor Printing

Dirty Background

If the background of prints is dirty, the drum unit might be dirty.

A CAUTION:

If ink comes into contact with your eyes, rinse immediately in running water.
 In the case of any abnormal symptoms, consult a doctor.

A CAUTION:

• Keep the ink or ink container out of the reach of children.

A CAUTION:

• If ink is ingested, force vomiting by drinking a strong saline solution and consult a doctor immediately.

🖉 Note

- To avoid getting dirty background prints when printing onto paper smaller than the original image, select a suitable reduction ratio or use larger print paper.
- When printing onto paper that does not absorb ink well, the background of prints might get dirty. In this case, lower the printing speed or use Skip Feed mode to dry the ink on the prints.

Open the front cover.

2 Pull out the drum unit.



🖉 Note

 \Box For how to take out the drum unit, \Rightarrow P.9 "*Changing the Drum Unit*".

B While pressing the drum lock, turn the drum until you can see the trailing edge of the master.



With a dry soft cloth, remove any ink that has accumulated on the trailing edge of the drum unit.



∰Important

□ Do not use benzine, thinner, or other organic liquids—doing so can damage the machine.

5 Turn the drum unit and lock it until it click after cleaning it.



1 Insert the drum unit until it locks in position, then lower the drum unit lock lever.



2 Close the front door.

When the Press Roller is Dirty

If the background of prints is dirty, the Press Roller might be dirty.

U Make several prints until clear image appears.

🖉 Note

□ If the print is still dirty, contact your service representative.

Faint Prints

If the machine is not used for a long period of time or you change the color drum unit, the ink on the drum might dry causing print quality to deteriorate. To solve this problem, set back your drum unit to the Master making unit and use Quality Start Mode. \Rightarrow Refer to the Master Making Unit's Operating Instructions.

If the print density is still too light even when using Quality Start mode, remake the master.

4. Remarks

Do's and Don'ts

A CAUTION:

• Unplug the power cord from the wall outlet before you move the equipment. While moving the equipment, you should take care that the power cord will not be damaged under the equipment.

∰Important

- While printing, do not turn off the main switch.
- While printing, do not unplug the power cord.
- While printing, do not open the door or covers.
- While printing, do not move the machine.
- Open and close the door and covers softly.
- When printing onto paper that contains images on the back, make sure there is a 10mm (0.4") margin at the back leading edge. If there is no margin, the machine might incorrectly detect that paper is wrapped around the drum and stop printing ⇒Refer to the Master Making Unit's Operating Instructions.
- When you use envelopes or pasted print paper, the leading edge of print might be damaged.
- Make sure to make a few trial prints to check the image position because the image position of the trial print might not correspond with that of the original.
- The leading edge of the prints might become stained if the edge touches the image of prints on the paper delivery tray.
- Print ink on the paper delivery tray might stick to the back side of the next print.
- Press the **[Proof]** key to perform a test print as the image density of the first few prints might be light.
- When the machine is on and the power source is less than 90% of the specified amount, printing quality will decrease. Therefore, make sure the supply from your electrical outlet is at least 90% of the required amount.
- When printing a large solid area on A3, 11" x 17" paper, the sides of the print tend to curl up after the print is fed out to the paper delivery tray. The next sheet that feeds out pushes against the curled sheet and a paper misfeed occurs. In this case, slow the printing speed down.
- When you make a lot of prints from a small image, ink might ooze out from the edges of the master, especially under high temperature and when printing in two or more colors. In this case, make a new master.
- Large uneven solid image wrinkles the master and you may not print as you want.

Where to Put Your Machine

Environment

Your machine's location should be carefully chosen because environmental conditions greatly affect its performance.

Optimum environmental conditions

A CAUTION:

- Keep the equipment away from humidity and dust. Otherwise a fire or an electric shock might occur.
- Do not place the equipment on an unstable or tilted surface. If it topples over, it could cause injury.

A CAUTION:

 If you use the equipment in a confined space, make sure there is a continuous air turnover.

A CAUTION:

- After you move the equipment, use the caster fixture to fix it in place. Otherwise the equipment might move or come down to cause a personal injury.
- Temperature: 10 30°C, 50 86°F
- Humidity: 20 90% RH
- A strong and level floor.
- The machine must be level within 5mm, 0.2" both front to rear and left to right.
- Be sure to locate this machine in a large well ventilated room that has an air turnover of more than 30m³/hr/person.

Environments to avoid

- Locations exposed to direct sunlight or strong light (more than 1500 lux).
- Locations directly exposed to cool air from an air conditioner or heated air from a heater (sudden temperature changes might cause condensation within the machine).
- Places where the machine might be subjected to frequent strong vibration.
- Dusty areas.
- Areas with corrosive gases.

Power Connection

\land WARNING:

- Only connect the machine to the power source described on the inside front cover of this manual. Connect the power cord directly into a wall outlet and do not use an extension cord.
- Do not damage, break or make any modifications to the power cord. Do not place heavy objects on it. Do not pull it hard nor bend it more than necessary. These actions could cause an electric shock or fire.

A CAUTION:

• Unplug the power cord from the wall outlet before you move the equipment. While moving the equipment, you should take care that the power cord will not be damaged under the equipment.

A CAUTION:

• When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).

Make sure the plug is firmly inserted in the outlet.

Machine Clearance

Place the machine near the power source, providing clearance as shown.

Main frame



- *: Paper delivery tray
- 1. More than 10cm, 4.0"
- 2. More than 60cm, 23.7"
- 3. More than 60cm, 23.7"
- 4. More than 60cm, 23.7"

Maintaining Your Machine

To maintain high print quality, clean the following parts and units regularly.

Cleaning the machine

Wipe the machine with a soft, damp cloth. Then wipe it with a dry cloth to remove the water.

∰Important

- Do not use chemical cleaner or organic solvent, such as thinner or benzene. If they get into the machine or melt plastic parts, a failure might occur.
- Do not clean parts other than those specified in this manual. Such parts should be cleaned by your service representative.

Cleaning the Main Frame

Cleaning the paper feed roller (Paper feed tray)

Wipe off the paper dust on the paper feed roller with a damp cloth, then wipe it with a dry cloth.



🔗 Note

If you do not clean the paper feed roller, paper misfeeds tend to occur.

5. Specifications

Main Frame

- Configuration:
 Floor standing (with custom table or cabinet)
- Printing Process: Twin color press roller printing system
- Original Size & Printing Area: Refer to the Master Making Unit's Operating Instructions
- ♦ Print Paper Size: Maximum: 297mm × 432mm, 11.6" × 17.0" Minimum: 70mm × 250mm, 2.8" × 9.8"
- Leading Edge Margin: Refer to the Master Making Unit's Operating Instructions
- Print Paper Weight:
 - $52.3 209.3 \text{g}/\text{m}^2$, 13.9 55.6 lb
- Print Speed: 90.105.120cpm (3 steps)
- Color Printing:

Drum unit replacement system

Image Position:

	Up&Down	Right&Left
Overall Image Adjustment	+10mm, 0.4" or —10mm, 0.4"	+10mm, 0.4" or —10mm, 0.4"
Drum2 Image Adjustment	Moving sums of both adjust- ment functions (Max 10mm, 0.4")	+5mm, 0.2" or —5mm, 0.2"

Paper Size and Paper Capacity:

 $1,000 \text{ sheets } (80g/m^2, 20 \text{ lb})$

Paper Delivery Tray Capacity: 1,000 sheets (80g/m², 20 lb)

Dimensions (W \times D \times H):

	Width	Depth	Height
Stored	920 mm, 36.2"	630 mm, 24.8"	555 mm, 21.9"
Set up	1,610 mm, 63.4"	630 mm, 24.8"	555 mm, 21.9"

♦ Weight:

• Machine: Less than 88kg, 194 lb

✤ Noise Emission ^{*1}:

Sound Power Level

	Printing Speed	Noise Emission
During printing	90cpm	78dB(A)
	105cpm	80dB(A)
	120cpm	82dB(A)
Stand-by		47dB(A)

Sound Pressure Level *2

	Printing Speed	Noise Emission
During printing	90cpm	65dB(A)
	105cpm	68dB(A)
	120cpm	69dB(A)

^{*1} The above measurement made in accordance with ISO 7779 are actual value.
 ^{*2} It is measured at the position of the operator.

Power Consumption:

• Printing: 0.55kW (Max)

Optional Equipment:

• Drum unit: color Drums A3, 11" × 17"

Solution Note

□ Specifications are subject to change without notice.

Consumables

Name	Size	Remarks
Ink-Black	1,000ml/pack	Environmental conditions: -5 to 40°C 10 – 95% RH
Ink-Red	1,000ml/pack	
Ink-Blue		
Ink-Green		
Ink-Brown		
Ink-Purple		
Ink-Yellow		
Ink-Navy		
Ink-Maroon		
Ink-Teal		
Ink-Orange		
Ink-Gray		
Ink-Violet		
Ink-Hunter green		
Ink-Burgundy		
Ink-Gold		
Ink-Reflex Blue		

🖉 Note

□ Specifications are subject to change without notice.

INDEX

【◁】【▷】【△】【▽】, 4

Α

accessing the user tools, 25 Add Ink Indicator (, 32 adjusting the position of printed images, 20 Auto Off, 26 Auto Reset Time, 26

В

Buzzer Off, 26

С

changing the printing speed, 22 clearing misfeeds, 34 [Clear Modes] key, 4 [Clear/Stop] key, 4 Clr Resettable Count, 26 consumables, 49 Counter, 4

D

dirty background, 39 Drm Stp Mode, 27 [Drum1] key, 4 [Drum2] key, 4 Drum unit, 9 drum unit handle B2, 9 drum unit lock lever B1, 2

Ε

environment, 44

F

Feed Setup, 27 front door, 1

I

ink, 32, 49 ink holder, 2

J

Jump Table, 27

Κ

[#] key, 4 keys, 4

L

Loading Paper, 10 loading paper, 31 Load Paper indicator (🖆), 31 Long Sheet Mode, 27

Μ

machine clearance, 45 machine exterior, 1 machine interior, 2 main switch, 2 maintaining your machine, 46 Max Print, 26

Ν

Number keys, 4

0

operation panel, 1, 4 options, 48

paper alignment wings, 2 paper delivery end plate, 2 paper delivery side plates, 2 paper delivery tray, 2 paper feed side plates, 1 Paper feed side plates knob, 1 Paper feed tray, 1 Paper feed tray down key, 1 paper misfeed in the paper exit section, 38 paper misfeed in the paper feed section, 34, 35 paper or master wrapped around the drum, 36 Paper Type, 17 poor printing, 39 [Position Adj/Drum2] key, 4 [Position Adj/Whole] key, 4 power connection, 45 [Ppr. Supply Adj] key, 4 [Ppr.Type] key, 4 [**Print**] key, 4 print paper, 13, 17, 31 Print Position, 27 [**Proof**] key, 4

R

Remarks, 43 Resettable Count, 26

S

Safety Information, i service call, 29 Setting and Changing the Drum Unit, 7 Setting Up the Paper Delivery Table, 11 Skip Display On Mode, 27 **[Skip Feed]** key, 4 Skip Feed printing, 23 Skip Number of Time, 27 Special kinds of Paper, 17 specifications, 47 standard paper, 17 standard printing, 15 System, 26

Т

thick paper, 17 Total Counter, 26 Total Counter Down, 27 trailing edge guides, 3 Troubleshooting, 29

U

user tools, 25, 26 [User Tools] key, 4

W

what you can do with this machine, iv when the image density is too light, 41 where to put your machine, 44 [] [] keys (Speed keys), 4

MEMO

MEMO

MEMO





TC-IIR

Operating Instructions



1 Operation

2 User Tools

- 3 Troubleshooting
- 4) Remarks
- 5 Specifications

Read this manual carefully before you use this machine and keep it handy for future reference. For safe and correct use, be sure to read the Safety Information in this manual before using the machine.

Introduction

This manual contains detailed instructions and notes on the operation and use of this machine. For your safety and benefit, read this manual carefully before using the machine. Keep this manual in a handy place for quick reference.

Notes:

Some illustrations in this manual might be slightly different from the machine. Certain options might not be available in some countries. For details, please contact your local dealer.

Two kinds of size notation are employed in this manual. With this machine refer to the inch version.

Power Source

120V, 60Hz, 5.5A or more

Please be sure to connect the power cord to a power source as above. For details about power source, \Rightarrow p.66 "Power Connection".

Safety Information

When using this machine, the following safety precautions should always be followed.

Safety During Operation

In this manual, the following important symbols are used:

A WARNING:

Indicates a potentially hazardous situation which, if instructions are not followed, could result in death or serious injury.

▲ CAUTION:

Indicates a potentially hazardous situation which, if instructions are not followed, may result in minor or moderate injury or damage to property.

A WARNING:

- Do not damage, break or make any modifications to the power cord. Do not place heavy objects on it. Do not pull it hard nor bend it more than necessary. These actions could cause an electric shock or fire.
- Disconnect the power plug (by pulling the plug, not the cable) if the power cable or plug becomes frayed or otherwise damaged.
- To avoid hazardous electric shock, do not remove any covers or screws other than those specified in this manual.
- Turn off the power and disconnect the power plug (by pulling the plug, not the cable) if any of the following occurs:
 - You spill something into the machine.
 - You suspect that your machine needs service or repair.
 - The external housing of your machine has been damaged.
- Keep the machine away from flammable liquids, gases, and aerosols. A fire or an electric shock might occur.
- Connect the power cord directly into a wall outlet and never use an extension cord.
- Only connect the machine to the power source described in the manual.
- Disposal can take place at our authorized dealer or at appropriate collection sites.

▲ CAUTION:

- After you move the machine, use the caster fixture to fix it in place. Otherwise the machine might move or come down to cause an injury.
- If you use the machine in a confined space, make sure there is a continuous air turnover.
- Keep the machine away from humidity and dust. Otherwise a fire or an electric shock might occur.
- Protect the machine from dampness or wet weather, such as rain and snow.
- Do not place the machine on an unstable or tilted surface. If it topples over, an injury might occur.
- Unplug the power cord from the wall outlet before you move the machine. While moving the machine, you should take care that the power cord will not be damaged under the machine.
- When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).
- Do not allow paper clips, staples, or other small metallic objects to fall inside the machine.
- For environmental reasons, do not dispose of the machine or expended supply waste at household waste collection points. Disposal can take place at an authorized dealer.
- When disposing of a used ink container, reattach the cap to prevent ink from splattering.
- Be careful not to get ink on your clothes when replacing an ink container. Ink stains on clothes are hard to remove.
- Be careful not to cut yourself on any sharp edges when you reach inside the machine to remove misfed sheets of paper or masters.
- If ink comes into contact with your eyes, rinse immediately in running water. For other symptoms, consult a doctor.
- Keep the ink or ink container out of reach of children.
- If ink is ingested, induce vomiting by drinking a strong saline solution. Consult a doctor immediately.
- If your skin comes into contact with ink, wash the affected area thoroughly with soap and water.
- While printing, do not touch the belt at the end of the paper delivery tray or the job separator. Otherwise, an injury might occur.
- Our products are engineered to meet the high standards of quality and functionality, and we recommend that you only use the expendable supplies available at an authorized dealer.

Positions of AWARNING and ACAUTION Labels

This machine has labels for \triangle WARNING and \triangle CAUTION at the positions shown below. For safety, please follow the instructions and handle the machine as indicated.



How to Read This Manual

Symbols

In this manual, the following symbols are used:

A WARNING:

This symbol indicates a potentially hazardous situation that might result in death or serious injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are described in the Safety Information section.

A CAUTION:

This symbol indicates a potentially hazardous situation that might result in minor or moderate injury or property damage that does not involve personal injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are described in the Safety Information section.

* The statements above are notes for your safety.

∰Important

If this instruction is not followed, paper might be misfed, originals might be damaged, or data might be lost. Be sure to read this.

Preparation

This symbol indicates the prior knowledge or preparations required before operating the machine.

🖉 Note

This symbol indicates precautions for operation, or actions to take after misoperation.

Limitation

This symbol indicates numerical limits, functions that cannot be used together, or conditions in which a particular function cannot be used.

PReference

This symbol indicates a reference.

[]

Keys that appear on the machine's display panel.

[]

Keys built into the machine's operation panel.

What You Can Do with This Machine

Below is a quick summary of this machine's features and where to look in this manual for more information.

Standard Printing

 \Rightarrow p.24 "Standard Printing".

★ Adjusting the Print Image Position ⇒ p.30 "Adjusting the Position of Printed Images".



1: Paper feed direction



- 1: Paper feed direction
- 2: Image of Drum 2

♦ Changing the Printing Speed ⇒ p.32 "Changing the Printing Speed".

TABLE OF CONTENTS

Safety Information	
Positions of AWARNING and ACAUTION Labels	iii
How to Read This Manual	iv
What You Can Do with This Machine	v
Machine Exterior	1
Machine Interior	2
Options	3
Control Panel	5
Keys	5
Indicators	6

1. Operation

Setting and Changing the Drum Unit	7
Setting the Drum Unit	
Changing the Drum Unit	9
Printing Preparations	10
Using the Paper Feed Tray and Delivery Tray	
Using the LCIT and LCOT	14
Installing the LCIT	
Turning On the Power	15
Loading Paper	16
Preparing the LCOT for Printing	17
Uninstalling the LCIT	19
Print Paper	21
Recommended for the LCIT	23
Recommended for the LCOT	23
Standard Printing	24
Removing Prints	25
Auto Reset	25
Auto Off	26
Printing onto Various Kinds of Paper	27
Printing onto Thick Paper	
Printing onto Standard Paper	27
Printing onto Special Kinds of Paper	
Paper Supply Adjustment	28
Adjusting the Position of Printed Images	
Changing the Printing Speed	32
Skip Feed Printing	

2. User Tools

Accessing the User Tools	35
User Tools	
1. System	
User Codes	
How to Set User Code Mode (#16)	
How to Use User Code Mode	.40
---	-----
How to Check the User Code Counter (#17)	
How to Clear the User Code Counter (#18)	.41
How to Check the Total Number of Masters and Prints Made Under All User Codes (#19)	
How to Clear the User Code Total Counter (#20)	

3. Troubleshooting

If Your Machine Does Not Operate as You Want	43
If You Cannot Make Prints as You Want	44
If the LCS Does Not Operate as You Want	
Loading Paper	
Loading Paper into the Paper Feed Tray	
Loading Paper into LCIT	
When the Add Ink Indicator (📥) Lights	
% Clearing Misfeeds	51
Paper Misfeed in the Paper Feed Section	51
Paper Misfeed in the Paper Feed Section	52
Paper Wrapped around the Drum	53
Paper Misfeed in the Paper Exit Section	
When Paper Misfeeds in the LCIT	56
☐ When the Open Cover/Unit Indicator Lights	57
Poor Printing	58
Dirty Background	58
When the Press Roller is Dirty	59
Faint Prints	59
When Prints Are Not Delivered in a Neat Stack	
When Printing on Small Size Paper	60
When Multiple Sheets Are Fed at the Same Time	61

4. Remarks

Do's and Don'ts	63
Where to Put Your Machine	65
Environment	65
Power Connection	66
Machine Clearance	66
Maintaining Your Machine	67
Cleaning the Main Frame	

5. Specifications

Main Frame	69
Option	
Large Capacity System	
Other Option	
Consumables	73
INDEX	

Machine Exterior



1. Front door

Open to access the inside of the machine.

2. Control Panel

 \Rightarrow p.5 "Control Panel".

3. Paper feed tray down key

Press to lower the Paper feed tray.

4. Paper feed side plates

Prevent paper being fed skewed.

5. Paper feed tray Set paper here.

6. Paper feed side plates knob Use to move the side plates.

7. Paper feed side plates knob lock lever

Fix to the paper feed side plates knob.

Machine Interior



1. Main switch

Use to turn the power on or off.

2. Paper alignment wings

Lift or lower the wings depending on the type of paper being used.

3. Paper delivery side plates

Use to align the prints on the paper delivery tray.

4. Paper delivery end plate

This plate aligns the leading edge of prints.

5. Paper delivery tray

Completed prints are delivered here.

6. Chocks

Use to adjust the buffer fins.

7. Drum Unit 2

The master is wrapped around this unit.

8. Drum Unit 1

The master is wrapped around this unit.

9. Ink holder

Set the ink cartridge in this holder.

10. Drum unit lock lever B1

Lower to unlock and pull out the drum unit.

11. Trailing edge guides

Swing out these guides when you use A4 \square , 8 $^{1}/_{2}$ " × 11" \square paper.

12. Buffer fins

Use to stack prints neatly.

13. Paper delivery end plate knob Use to move the end plate.

14. Paper delivery side plate knobs Use to move the side plates.



Options

✤ Large Capacity System (LCS): Large capacity input tray (LCIT)



- **1.** Indicators
- 2. Side guide adjustment knob
- 3. Down button
- 4. Up button
- 5. Side guide screw
- **6.** Feeding pressure lever
- 7. Side guides

- 8. Input tray
- 9. Power switch
- **10.** Cover release lever
- 11. Cover
- **12.** Intermediate feeding section
- **13.** LCIT release lever

✤ Large Capacity System (LCS): Large capacity output tray (LCOT)



- **1.** Side guide adjustment knob
- 2. End plate screw
- 3. End plate
- 4. Output tray
- 5. Side guides
- 6. Up button
- 7. Down button

Control Panel

Keys



1. [Drum 2] key

Press when you need to set or change the Drum 2. \Rightarrow p.7 "Setting the Drum Unit"

2. [Drum 1] key

Press when you need to set or change the Drum $1. \Rightarrow p.7$ "Setting the Drum Unit"

3. [Ppr.type] key

Press to select the paper type. \Rightarrow p.27 "Printing onto Various Kinds of Paper"

4. [Ppr. Supply Adj]

Press to change the paper feeding ratio and paper separation ratio. \Rightarrow p.28 "Paper Supply Adjustment"

5. [◄] [►] keys (Speed keys)

Press to adjust the printing speed. See \Rightarrow p.5 "Keys", \Rightarrow p.32 "Changing the Printing Speed".

6. [Position Adj/Whole] key

Press to adjust the mixed image positions of Drum1 and Drum2. \Rightarrow p.30 "Adjusting the Position of Printed Images"

7. [⊲][▷][△][⊽] keys

Press to shift the image forward, backward, right, or left. \Rightarrow p.5 "Keys", \Rightarrow p.30 "Adjusting the Position of Printed Images".

Also use to highlight items you wish to select on the panel display.

8. [Clear/Stop] key

Press to stop printing.

9. [#] key

Use to enter data in selected modes.

10. [Print] key Press to start printing.

11. [Proof] key

Press to make proof prints.

12. [Clear Modes/Energy Saver] key

Press to clear any previously entered job settings.

13. Number keys

Press to enter the desired number of prints and data for selected modes.

14. Counter

Displays the number of prints entered. While printing, it shows the number of prints remaining.

15. [Position Adj/Drum2] key

Press to adjust the image position's of Drum2.

16. [Skip Feed] key

Press to select skip feed printing. \Rightarrow p.33 "Skip Feed Printing".

17. [User Tools] key

Press to change the default settings to meet your requirements.

Indicators



1. Error Indicators

These indicators are lit when a non-standard condition occurs within the machine.

2. Guidance Display

Display the machine's condition.

3. Counter

Displays the number of prints entered. While printing, it shows the number of prints remaining.

4. Speed Indicators

These indicators show the printing speed that is selected.

5. Drum set indicator

The green indicator lights when the drum unit is ready to pull out. If not ready, the red indicator lights.



1. Operation

Setting and Changing the Drum Unit

Before you start printing, you must make a master print using the master making unit. The master print is wrapped around the drum unit.

Note

- Color drum units are available as options in addition to the standard black unit. For making color prints, a separate drum unit is necessary for each color.
- Insert the same kinds of drum unit for both Drum 1 and Drum 2.
- □ Color Drum Type 50S/80S/90<A4> is not available for this machine.
- □ A4 size master cut drum is not available for this machine.

Setting the Drum Unit

Make sure that you select either [Drum 1] or [Drum 2] before setting the drum unit.



🖉 Note

- □ Make sure that the indicator is lit.
- **2** Open the Front Door.



Lift upper drum stay B3 a little to unlock the drum unit, then push into the drum unit while holding drum unit handle B2 and upper drum stay B3.



🖉 Note

- Make sure the green light beside the drum unit lock lever is on.
- □ If the red light is on, go back to step 1.
- □ Make sure that the drum unit lock lever B1 is released.



Insert the drum unit along the guide rail.



5 Slide in the drum unit until it locks in position.



🖉 Note

- □ Insert the same kinds of drum unit for both Drum 1 and Drum 2.
- **6** Lift drum unit lock lever B1.







🖉 Note

- □ If you want to set another drum unit, go back to step 1.
- □ Make sure that the Open Cover Indicator turns off.

Changing the Drum Unit

Make sure that you select either [Drum 1] or [Drum 2] before changing the drum unit.

2 Open the front door.

3 Make sure the green light beside the drum unit lock lever is on before sliding out the drum. If the red light is on, go back to step **1**.



4 Lower the drum unit lock lever B1.



5 Pull out drum unit handle B2 slowly.



Lift upper drum stay B3 a little to unlock the drum unit, then pull out the drum unit while holding drum unit handle B2 and upper drum stay B3.



∰Important

- □ Be careful not to let the drum unit fall.
- **2** Insert the color drum unit along the guide rail.
- **B** Lower drum unit lock lever B1 of the inserted drum.
- Slide in the drum unit until it locks in position.
- Lift drum unit lock lever B1.
- Close the front door.

🖉 Note

□ Make sure that the Open Cover indicator turns off.

Printing Preparations

Using the Paper Feed Tray and Delivery Tray

Loading Paper





2 Lift the feed side/end plates.



3 Make sure that the locklever for the side plate is raised (lock is released), and then grasp the side plate knob and adjust the side plate to match the paper size.



∰Important

- Always adjust the position with the lock lever for the paper feed side plates in the raised position (lock released).
- 4 Place the paper on the paper feed tray.



🖉 Note

Correct the paper curl before loading the paper. If you cannot do so, stack the paper with the curl face down.

Reference

 \Rightarrow p.21 "Print Paper"

5 Make sure that the paper feed side plates are touching both sides of the paper, and then push the lock lever for the side plates down to lock the side plates into position.



∰Important

□ Always make sure that you push the lock lever for the side plates down to lock the side plates position.

🖉 Note

Make sure that the paper size and direction in the panel display correspond with the actual paper size and direction set on the paper feed tray.

Setting Up The Paper Delivery Tray

🖉 Note

- When using the optional LCOT, see p.14 "Using the LCIT and LCOT".
- Raise the paper delivery tray slightly, and then gently lower it with your hand.



2 Lift the paper delivery side plates and adjust them to match the paper size.



B Lift the paper delivery end plate and adjust it to match the paper size.



🖉 Note

□ The inside of the plates should correspond to the paper size.

Adjusting the Paper Alignment Wings and Chocks

Use the paper alignment wings and chocks to stack printed paper neatly.

🖉 Note

- Prints may be delivered curled up if they contain large areas of solid image. If this happens, raise the paper alignment wings to about 45 degrees. When printing on B5^D of 52.3 g/m², 13.9 lb or thinner, slide the chocks up together.
- Depending on the type of paper you are using, you may not be able to load to capacity (1000 sheets) when the wings are raised.
- □ When printing on 52.3 g/m², 13.9 lb or thinner at a fast speed, paper jams (C) may occur in the paper exit area. If this happens, do the following:
 - Decrease print speed. See p.32 "Changing the Printing Speed".
 - Lower the paper alignment wings.
 - Push the end plate toward the paper delivery tray edge.
- When the paper alignment wings are raised, prints may not be delivered neatly stacked, depending on paper type. If this happens, lower the wings.

Paper alignment wings Adjust the paper alignment wings.



1	2
---	---

- **1.** Raise the wings fully.
- 2. Raise the wings to about 45 degrees.

Chocks

Slide the chocks up or down to adjust them to paper size and thickness.



Adjust the paper alignment wings and chocks according to paper size and thickness, as follows: When printing on thick paper (128 g/m^2 , 34 lb or thicker)

1 Lower the paper alignment wings.

2 Slide the chocks down.

When printing on standard paper ($52.3 \text{ g/m}^2 - 128 \text{ g/m}^2$, 13.9 lb to 34 lb)

- **1** Adjust the paper alignment wings according to the paper size.
 - For A3, 11" × 17", B4 size paper Raise the paper alignment wings fully.
 - For A4 and B5 size paper Raise the paper alignment wings to about 45 degrees.

2 Slide the chocks up.

When printing on thin paper (52.3 g/m^2 , 13.9 lb or thinner)

1 Raise the paper alignment wings to about 45 degrees.

2 Slide the chocks down.

\mathcal{O} Using the trailing edge guides

When printing on A4 \Box , $8^1/_2$ " \Box , B5 \Box size paper, swing out the guides as shown below:



Turning on the Main Power

- Make sure that the power cord is firmly plugged into the wall outlet.
- **2** Turn on the main power switch.



AKT018S

Using the LCIT and LCOT

Installing the LCIT

Open the paper feed tray of the machine.



2 Move the side guides of the paper feed tray of the machine to the widest position.



🖉 Note

The side guides of the paper feed tray may rest slightly above the tray surface even when they are folded. Do not push them down forcefully.

1 Lower the side plats.



4 Hold the handle and unfold the intermediate feeding section of the LCIT.



🖉 Note

□ Do not release the handle.

Lift the end of the intermediate feeding section and put it down placing the wheeled support bar onto the paper feed tray.



Push the LCIT into the machine until it clicks.



🖉 Note

- Make sure that the metal projections on both sides touch the machine. If there is a gap, push until the gap disappears.
- **2** Plug the LCOT connection cord into the socket located at the bottom of the back of the LCIT.



Turning On the Power

Turning On the Power

- Check that the LCOT connection cord is connected to the LCIT.
- 2 Make sure that the power cord is firmly plugged into the wall outlet.
- **3** Turn the power switch on.

The green indicator blinks.



Turning Off the Power

1 Turn the power switch off.



Loading Paper

1 Turn the side guide adjustment knob to adjust the side guides to the paper size.



2 Tighten the screw to lock the side guides.



B Load paper.



🖉 Note

The leading edge of the paper must touch the inside of the LCIT.

Press the up button.

The input tray goes up, and a sheet of paper is fed into the intermediate feeding section. The green indicator lights.



5 At the machine, adjust the side guides of the paper feed tray to the paper size set for the LCIT and check that the paper size is displayed on the control panel.



🖉 Note

Make sure that the paper size at the machine (the side guides of the paper feed tray and paper size displayed on the control panel) matches the size of the paper loaded on the LCIT. Otherwise, the inside of the machine will get dirty.

Loading Paper Smaller than B6 JIS (Japanese Industrial Standard)(128 × 182 mm, 5.0" × 7.1")

Paper smaller than B6 JIS must be loaded directly onto the paper feed tray of the machine. The LCIT must be detached.

1 Detach the LCIT.

Reference

p.19 "Uninstalling the LCIT"

2 Load paper onto the paper feed tray.

\mathcal{P} Reference

For details, see p.10 "Loading Paper"

Preparing the LCOT for Printing

1 Press the up button.

The output tray goes up.



2 Turn the side guide adjustment knob to adjust the side guides to the paper size.



Note

- □ Align the inside of the side guides with the appropriate mark on the output tray.

1 Loosen the screw for the end plate, adjust it to the paper size, and then tighten the screw to lock the end plate.



Note 🖉

□ Align the screw with the appropriate paper size mark.

Printing on Paper Smaller than B6 JIS

1 Move the side guides outward.



2 Loosen the screw for the end plate, move it as close to the machine as possible, and then tighten the screw to lock the end plate.



Printing on 81.4 g/m² (21.6 lb.) or Heavier Paper

1 Lower the paper alignment wings.



🖉 Note

- Depending on the type of paper that you are using, you might not be able to use the full capacity (3000 sheets) of the LCOT when the wings are lifted.
- □ Lift the paper alignment wings when B5 JIS□ prints are delivered curled up.

Printing on Sizes Smaller than A4 or $8^{1}/_{2}$ " \times 11" \square Paper

1 Swing out the guides as shown in the illustration.



Removing Prints

Move the side guides outward, and then lift the end plate arm.



🖉 Note

Lift the end plate arm completely before releasing it.

2 Remove prints.



S Move the side guides and end plate arm back to their original positions.

🖉 Note

□ Lower the end plate arm completely before releasing it.

Uninstalling the LCIT

- Turn both the main switch of the machine and power switch of the LCIT off, and then unplug the power cord from the wall outlet.
- **2** Unplug the LCOT connection cord.



B Move the side guides of the paper feed tray of the machine to the widest position.



While pulling the LCIT release lever, detach the LCIT.



🖉 Note

- Be sure to hold the handle of the intermediate feeding section when you detach the LCIT.
- When using in off-line mode, do not move the LCIT further than the LCOT connection cord can reach.

5 Fold the intermediate feeding section.



Print Paper

The following limitations apply to the Paper Feed Tray:

	Paper Size		Paper
	Metric	Inch	Weight
Paper feed tray	A3 🖵, B4 🖵, A4 🖵, B5 🖵, Others (Vertical: 70 - 297mm, Horizontal: 250 - 432mm)	11" × 17" \square , 8 ¹ / ₂ " × 14" \square , 8 ¹ / ₂ " × 11" \square , Others (Vertical: 2.76" - 11.7", Horizontal: 9.84" - 17")	52.3 - 209.3g/m², 13.9 - 55.6 lb

Non-recommended paper and envelope:

- Roughly cut paper/envelope
- Paper of different thickness in the same stack
- Envelopes heavier than 85g/m², 22 lb.
- Folded, curled, creased, or damaged paper
- Torn paper
- Slippery paper
- Rough paper/envelope
- Paper with any kind of coating (such as carbon)
- Short grain paper
- Thin paper that has low stiffness
- Paper that is prone to generate a lot of paper dust
- Grained paper loaded with the direction of the grain perpendicular to the feed direction
- Certain types of long thin envelopes e.g. international mail envelopes
- The following types of envelopes:

Envelopes with glue or gum	Envelopes with windows	Envelopes with round tags	Open envelopes
			Less than 150mm 6.0"

🖉 Note

□ If you print on rough grained paper, the following problems may occur:

- Black-Spotted image
- Blurred image
- Damaging master

∰Important

□ Correct curls in the paper before placing it in the machine. When you cannot correct the paper curl, stack the paper with the curl face down or face up as shown in the illustration. If paper is curled, it might wrap around the drum or stains might appear.

	Right	Wrong
Thin Paper		
Thick Paper		TPEYBO

Recommended for the LCIT

The size and quantity of paper that can be loaded on the LCIT are as follows.

Paper size		Paper weight	Tray capacity
Metric version	Inch version		
Maximum: 297 × 432 mm (325 × 447 mm ^{*1}) Minimum: 128 × 182 mm	Maximum: 11.6" × 17.0" (12.7" × 17.5" ^{*1}) Minimum: 5.1" × 7.1"	47.1 – 209.3 g/m ² (12.5 – 55.61 lb.)	3000 sheets (80 g/m ² , 20 lb.) Paper stack height: Less than 320mm (12.5")

^{*1} When the image position is set to 0 mm (0")

🖉 Note

- □ Tray capacity is based on using high quality 80 g/m² (20 lb.) paper. The number of sheets shown is approximate.
- □ The types of paper that can be used correspond to the machine specification. For more information, see the operating instructions for the machine.

Recommended for the LCOT

Paper size		Paper weight	Tray capacity
Metric version	Inch version		
Maximum: 297 × 432 mm	Maximum: 11.6" × 17.0"	47.1 – 209.3 g/m ²	3000 sheets
(325 × 447 mm ^{*1})	(12.7" × 17.5" ^{*1})	(12.5 – 55.61 lb.)	(80 g/m ² , 20 lb.)
Minimum: 70 × 148 mm	Minimum: $2.8" \times 5.9"$		Paper stack height:
(When the LCIT is in-	(When the LCIT is in-		Less than 345mm
stalled: 128 × 182 mm)	stalled: $5.1" \times 7.1"$)		(13.5")

^{*1} When the image position is set to 0 mm (0")

🖉 Note

□ Tray capacity is based on using high quality 80 g/m² (20 lb.) paper. The number of sheets shown is approximate.

Standard Printing

1 Set the Drum Unit.

\mathcal{P} Reference

 \Rightarrow p.7 "Setting the Drum Unit"

2 Make sure that the machine is ready for printing.

3 Make sure that there are no previous settings remaining.

Note

□ To clear any previous settings, press the [Clear Modes].

4 Set the paper

\mathcal{P} Reference

 \Rightarrow p.10 "Loading Paper"

5 Select the Paper type

PReference

 \Rightarrow p.27 "Printing onto Various Kinds of Paper"

6 Set your desired settings.

Press the [Proof] Key.



Note

- □ If the Image position is not correct, adjust it by using [Whole] or [**Drum 2**]. \Rightarrow p.30 "Adjusting" the Position of Printed Images".
- □ If the image density is slightly dark or light, adjust the image density, using [] Speed keys. \Rightarrow p.32 "Changing the Printing Speed".

8 Enter the number of prints required with the number keys.



Note

□ The counter shows the number of prints you set.



□ To change the number entered, press the [Clear/Stop] key and enter the new number.

Press the [Print] key.



🖉 Note

- To stop the machine during a multi-print run, press the [Clear/Stop] key.
- □ To return the machine to the initial condition after printing, press the **[Clear Modes]** key.

Removing Prints

1 Pull the front paper delivery side plate down towards you to open.



🖉 Note

You cannot open the rear paper delivery side plate. **2** Remove the prints from the paper delivery tray and close the paper delivery side plate.



Auto Reset

The machine returns to its initial condition automatically after your job is finished. This function is called "Auto Reset".⇒ p.36 "User Tools"

Note

- □ You can change the time the machine can wait before Auto Reset mode starts.
- The machine will not automatically enter Auto Reset mode in the following cases:
 - If there is no ink
 - If paper misfeed occur
 - If the machine is printing
 - If there is no paper
 - If the cover open message is displayed

Auto Off

If you do not operate the machine for a certain period the machine can enter Quality Standby mode to remove ink from inside the machine, and then turn itself off. This function is called "Auto Off".

Limitation

Quality Standby mode does not available when you use Color Drum Type 50S/80S/90<A4>.

🖉 Note

□ You can change the time the machine can wait before Auto Off modes starts.⇒ p.36 "User Tools"

Printing onto Various Kinds of Paper

Before printing onto thick paper, thin paper, envelopes or special kinds of paper loaded in the Paper feed tray, you must select the paper type.

Printing onto Thick Paper

If you wish to print onto thick (127.9 to $209.3g/m^2$, 34 to 55.6 lb or heavier) paper, perform the following steps.

Press the [Ppr.Type] key.



2 Select [2:THICK] with $[\triangleleft] [\triangleright]$ key.

PAPER TYPE 1:STD 2:THICK 3:SPL **

B Press the [#] key.

Printing onto Standard Paper

Press the [Ppr.Type]key.



2 Make sure that [1:STD] is selected.

PAPER	TYPE	1:STD
2:THIC	Ж 3 : SP	L *:

Press the [#] key.

Printing onto Special Kinds of Paper

Press the [Ppr.Type] key.



2 Select [3:SPL] with $[\triangleleft] [\triangleright]$ key.

PAPER TYPE 1:STD 2:THICK 3:SPL **

Press the [#] key.

Printing onto envelopes

Place the envelopes in the paper feed tray as shown in the illustration.



*: Paper feed direction

Note

- □ When you use envelopes, the Paper feed tray capacity is about 150 sheets (85g/m², 22 lb) or enough to load a stack up to 105mm, 4.1" high.
- If your envelopes do not feed in well, lift the paper feed tray a little, and then lower it so that it slants up slightly.



Paper Supply Adjustment

If paper misfeeds occur frequently, you can adjust the paper feeding ratio and paper separation ratio.

Press the [Ppr. Supply Adj] key.



FEED P	RES.	0123456**
SEPAR	PRES	0123456**

- Press [⊲] [▷] [△] [▽] or the number keys to adjust the paper feeding ratios and the paper separation ratios.
- Press [#] key.

If the machine does not feed enough paper

• Change the paper feeding ratio setting as follows.

Paper type	Paper feed pres- sure ratio
Normal	5~6 (*3)
Thick	6 (*5)
Special kinds of Paper	5~6 (*3)

*: Default

If the machine feeds too much paper

• Change the paper separation ratio setting as follows.

Paper type	Paper feed sepa- ration ratio
Normal	4~6 (*3)
Thick	3~4 (*2)
Special kinds of Paper	3~4 (*1)

*: Default

Adjusting the Position of Printed Images

Use the following procedure to adjust the position of print image as required.

Note

- Unexpected change to the image position may occur with the following actions:
 - Switching Drum1 and 2.
 - Remaking a master using the master making unit.
 - Changing the print speed.

There are two kinds of image adjustment as follows:

Overall Image Adjustment

You can adjust the mixed image position of Drum1 and Drum2.



1: Paper feed direction

Drum2 Image Adjustment

You can adjust the image position of Drum2.



1: Paper Feed Direction 2: Image of Drum2

🖉 Note

- When the main switch is turned off, the image returns to the default position.
- Press the [Whole] or [Drum 2] key.



2 Adjust the image position using the $[\triangleleft], [\triangleright], [\triangle], and <math>[\bigtriangledown]$ keys.



Note

- □ When you shift the image forward, leave a 10mm, 0.4" margin at the leading edge. If there is no margin, paper might wrap around the drum and cause a misfeed.
- □ If you adjust the image position, a print shadow might appear.

Overall image adjustment

You can change the overall image position of both Drum 1 and 2. Use $[\triangleleft] [\triangleright] [\triangle] [\nabla]$ keys to shift the image each way in 0.5mm, 0.02" steps.

Up & Down	Right & Left
+10mm, 0.4" or -	+15mm, 0.6" or -
10mm, 0.4"	15mm, 0.6"

Drum 2 image adjustment

1 You can change the image position of Drum 2. Use $[\triangleleft] [\triangleright] [\triangle]$ $[\nabla]$ keys to shift the image each way in 0.125mm, 0.005" steps.

Up & Down	Right & Left
Moving sums of both adjustment functions (Max 10mm, 0.4")	+5mm, 0.2″ or - 5mm, 0.2″

Press the [Enter] key.

Press the [Proof] key to check the image position.



Changing the Printing Speed

Use the **[◀]** or **[▶]** key to adjust the printing speed. The relationship between printing speed and print quality depends on the type of paper you use.

Press the [▶] key to increase the speed and press the [◄] key to reduce the speed.



🖉 Note

- The following speeds are available:
 - Setting 1 (default): 90 sheets/minute
 - Setting 2: 105 sheets/minute
 - Setting 3: 120 sheets/minute
- The faster the printing speed becomes, the lighter the printing density is, and vice versa.
- If you change the print speed while printing, a print shadow might appear.
- When the machine is used in low temperature conditions, the image density might decrease. In this case, use setting one.

Skip Feed Printing

If the backs of prints are dirty, you can increase the time between prints using the **[Skip Feed]** key. By default, when one sheet of paper is fed the drum rotates once. However, you can select the number of rotations of the drum. This gives you the chance to remove prints one by one from the paper delivery tray or insert one sheet of paper between two prints. If you use this function, you can also use paper longer than 432mm, 17.0" in spite of the maximum length limitations of paper.

🖉 Note

- □ Two rotations per sheet of paper is the default. You can change this default setting with the user tools. See "No. of Skip Feed" ⇒ p.33 "Skip Feed Printing".
- □ The maximum length of paper in Skip Feed mode is 460mm, 18.1".
- When you use paper longer than 432mm, 17.0", completed prints will not be delivered to the paper delivery tray properly, so lower the paper delivery end plate and receive completed prints by hand.

Press the [Skip Feed] key.



If necessary, select the number of rotations of the drum per sheet of paper fed with the [<] [▷] keys.</p>



🖉 Note

- You can also select the number of rotations with the Number keys.
- You can select from 2 to 9 rotations.
- □ By default, the machine asks you to confirm the number of rotations. You can have this step omitted by adjusting the user tool settings. See "No. of Skip Feed" ⇒ p.36 "User Tools".

Press the [**#**] key.

Press the [Start] key.



5 Check the image position of the trial or proof print.

🖉 Note

□ If the image position is not correct, adjust it using the [Whole] or [Drum2] key (⇒ p.30 "Adjusting the Position of Printed Images").

6 Make your prints.
2. User Tools

Accessing the User Tools

The user tools allow you to customize various default settings. This section is intended for the machine administrator.

Press the [User Tools] key.



Using the [\triangle], or [\bigtriangledown] key

● Search for the desired user tool number with the [△], [▽], key.



Using the number keys

• Enter the desired user tool number with the Number keys.



- 2 Change the settings by following the instructions on the panel display. Then press the [#] key.
- Press the [User Tools] key to return to the standby display.



🖉 Note

□ The settings are not canceled even if the main switch is turned off or the **[Clear Modes]** key is pressed.

User Tools

\mathcal{P} Reference

For how to access the user tools, \Rightarrow p.35 "Accessing the User Tools".

1. System

No.	Mode	Description	
1	Auto Reset Time	The machine returns to its initial condition automatically after your job is finished. The automatic reset time can be set from 1 to 5 minutes or off (0 minute).	
		Default: Off	
2	Resettable Count	The counter shows the number of prints you made.	
3	Clr Resettable	Choose whether the total number of prints is reset.	
	Count		
		Default: Not clear	
4	Max Print	The maximum print quantity can be set between 1 and 9999.	
		Default: 9999	
5	Total Counter	Use to display the total number of prints.	
6	Buzzer Off	Turns the beeper on or off.	
		Default: STD. (standard)	
		Available settings:	
		 0: KEY OFF (When you press a key, the beeper does not sound. When warning messages appear on the panel dis- play, the beeper sounds.) 	
		• 1: ON (The beeper sounds when you press a key or when warning messages appear on the panel display.)	
		• 2: OFF (The beeper does not sound when you press keys or when warning messages appear on the panel display.)	
7	Auto Off	If you do not operate the machine for a certain period the machine can enter Quality Standby mode to remove ink from inside the machine, and then turn itself off. This function is called "Auto Off". The time can be set from 10 to 90 minutes.	
		Default: 60 minutes	
		Quality Standby mode is not available when you use Color Drum Type 50S/80S/90 <a4>.</a4>	

No.	Mode	Description
8	Jump Table	You can change the angle of the wing guide depending on the pa- per type you use.
		 Note Default: Auto Available settings: Up (Select this setting when standard thickness or thin paper misfeeds at the paper exit section occur frequently.) Down (Select this setting when A4 – B5, 8¹/₂" × 11" thick paper is not delivered properly to the paper delivery tray.)
9	Drm Stp Mode	You can select the drum which you will be able to pull out imme- diately after you finish your job without pressing any key.
		NoteDefault: Drum 1
10	Long Sheet Mode	You can select whether you can use paper longer than 432mm, 17.0" or not. Note Default: <i>Not to use</i>
		When you use paper longer than 432mm, 17.0", lower the paper delivery end plate and receive completed prints by hand.
11	Skip Number of Time	Specifies the number of drum rotations in Skip Feed mode when the power is turned on. You can also select whether you can change the number of drum rotations temporarily when you press the [Skip Feed] key. \Rightarrow p.33 "Skip Feed Printing".
		 Note Default: Number of Skip Feed: 2
12	Skip Display On Mode	When you press [Skip Feed] key, you can select whether optional print counts display shows up or not.
		NoteDefault: Off
13	Total Counter Down	The copy counter can be set to show the number of copies made (Count Up), or the number of copies remaining to be made (Count Down).
		NoteDefault: Yes (Count Down)
14	Print Position	You can register the settings of print image position.
15	Feed Setup	You can register the settings for frequently use.

No.	Mode	Description		
16	User Code Mode	Selects user code mode. When you set this function, you have to also specify the auto reset time. For details about user code mode, see p.39 "User Codes".		
		ℬ Note		
		Default:		
		• User Code mode: 0		
		Auto Reset time: 0		
		Adjustment value:		
		• User Code mode: 0: No 1: Yes		
		• Auto Reset time: 0: No, 1 – 5 minutes		
17	UC Count	Displays the number of prints made in each user code.		
18	Clear UC Count	Clears each user code counter.		
		🖉 Note		
		Default: 0		
		□ Adjustment value: 0: No 1: Yes		
19	Total UC Count	Displays the total number of prints for all the 200 user codes.		
20	Clear Total UC	Clears the total user code counter.		
	Count	I Note		
		\Box Default: 0		
		Adjustment value: 0: No 1: Yes		

2

User Codes

If the machine is set to use the User Code function, operators must enter their user codes before the machine can operate. The machine keeps count of the number of prints made under each user code.

In this mode, the following 200 user codes (fixed) can be used to access the machine: 000, 019, 028, 037, 046, 055, 064, 073, 082, 091, 100, 119, 128, 137, 146, 155, 164, 173, 182, 191, 200, 219, 228, 237, 246, 255, 264, 273, 282, 291, 300, 319, 328, 337, 346, 355, 364, 373, 382, 391, 400, 419, 428, 437, 446, 455, 464, 473, 482, 491, 500, 519, 528, 537, 546, 555, 564, 573, 582, 591, 600, 619, 628, 637, 646, 655, 664, 673, 682, 691, 700, 719, 728, 737, 746, 755, 764, 773, 782, 791, 800, 819, 828, 837, 846, 855, 864, 873, 882, 891, 900, 919, 928, 937, 946, 955, 964, 973, 982, 991, 001, 012, 023, 034, 045, 056, 067, 078, 089, 090, 101, 112, 123, 134, 145, 156, 167, 178, 189, 190, 201, 212, 223, 234, 245, 256, 267, 278, 289, 290, 301, 312, 323, 334, 345, 356, 367, 378, 389, 390, 401, 412, 423, 434, 445, 456, 467, 478, 489, 490, 501, 512, 523, 534, 545, 556, 567, 578, 589, 590, 601, 612, 623, 634, 645, 656, 667, 678, 689, 690, 701, 712, 723, 734, 745, 756, 767, 778, 789, 790, 801, 812, 823, 834, 845, 856, 867, 878, 889, 890, 901, 912, 923, 934, 945, 956, 967, 978, 989,990

🖉 Note

□ To prevent unauthorized users from accessing the machine, note down the codes and then black out the codes from this manual.

How to Set User Code Mode (#16)

The following procedure explains how to set user code mode. This must be done before a user code can be entered.

- Press the [User Tools] key.
- **2** Enter "16" with the number keys and press the [#] key.
- Enter "1" (Yes) with the number keys and then press the [#] key.
- 4 Specify the Auto Reset time. Enter the desired setting with the number keys and press the [#] key.
- **5** Press the **[User Tools]** key to leave User Tools.

How to Use User Code Mode

- Enter your assigned 3-digit user code with the number keys, then press the [#] key.
- **2** Make your prints.
- After you have finished, press the [Clear/Stop] key while holding down the [Clear Mode] key.



🖉 Note

- This prevents others from making prints using your user code.
- If you do not follow this step, the machine will not request the next user for their codes unless the auto reset time has expired.

How to Check the User Code Counter (#17)

If you want to check the total masters and prints made under all user codes, see p.41 "How to Check the Total Number of Masters and Prints Made Under All User Codes (#19)".

Press the [User Tools] key.

2 Enter "17" with the number keys and press the [#] key.

The number of masters and prints made under the user code "382" will be displayed in the guidance display.

- **E** Keep pressing the [#] key to display the number of masters and prints made under your user code.
- 4 Press the [User Tools] key to leave User Tools.

How to Clear the User Code Counter (#18)

PReference

If you want to clear every user code counter, see p.41 "How to Clear the User Code Total Counter (#20)".

Press the [User Tools] key.

2 Enter "18" with the number keys and press the [#] key.

B Keep pressing the [#] key until desired user code is displayed.

4 Enter "1" (Yes) with the number keys and press the [#] key.

5 Press the **[User Tools]** key to leave User Tools.

How to Check the Total Number of Masters and Prints Made Under All User Codes (#19)

Press the [User Tools] key.

2 Enter "19" with the number keys and press the [#] key.

The total number of prints made under all user codes will be displayed in the guidance display.

B Press the [User Tools] key to leave User Tools.

How to Clear the User Code Total Counter (#20)

Press the [User Tools] key.

2 Enter "20" with the number keys and press the [#] key.

B Enter "1" (Yes) with the number keys and press the [#] key.

Press the [User Tools] key to leave User Tools.

3. Troubleshooting

If Your Machine Does Not Operate as You Want

If a malfunction or a misfeed occurs, the following messages will appear on the panel display.

Message	Meaning
RE-ENTER COPY NUMBER	The number of prints exceeds the maximum print quantity. You can change the maximum number of prints that can be made in one operation with the user tools. \Rightarrow p.36 "User Tools".
DRUM1:	Slide in the drum until it clicks.
SET COMPLETELY	Make sure that the drum is completely set in position.
SC*-**TEL*********	Turn the main switch off and on.
CALL SERVICE	If the message appears again, contact your service representative.
COLD DRUM NOT TO USE 3RD SPEED	Slow down the printing speed, and then press start key.
DRUM1 UNSITABLE	Insert the same kinds of drum unit for both Drum1 and Drum2.
DRUM TYPE	If the message appears again, contact your service representative.

$\sqrt[3]{}$ When a service call message is shown on the panel display panel

Turn the main switch off and back on again. If a service code appears again, contact your service representative.

If You Cannot Make Prints as You Want

Problem	Cause	Action
Misfeeds occur frequently.	Improper paper type is selected.	Select proper paper type. Reference Refer to the master making unit's operating instruc- tions.
Parts of the image are not printed.	The image is too wide.	 Set larger size paper. Return the drum unit to the master making units, and then reduce the print image size.
Print shadow appears.	The background image densi- ty is too high.	Switch drum 1 and 2.Set thick paper.
The print image appears too light.	The print speed is too fast.	Lower the print speed.
Scratches appear on the print image.	Sharp edges in the machine may have scratched your prints.	Increase the print speed.Set thick paper.
The images of drum 1 and 2 do not mix well together.	If the image density is too high, the background color might appear strong.	Switch drum 1 and 2.Use the image of drum 1 for background.
2nd printing with another drum is unsatisfactory.	The 1st print image is still wet.	Wait until the 1st image be- comes dry.
Roller marks appear when you print onto the reverse side of paper.	1st printed image is still wet and the press roller becomes dirty.	 Wait until the 1st printed image becomes dry. Set thick paper. Wipe off the ink on the press roller. ⇒ p.59 "When the Press Roller is Dirty"

Problem	Cause	Action
An uneven solid image appears.	Large solid image wrinkles the master.	 Increase the print speed. Set thick paper. Use Drum2 for a large solid image. Return the drum unit to the master making unit, and then remake the master with economy mode or quality start mode. Use Quality Standby mode by pressing the clear mode key for more than 3 seconds. When you make master, make a few trial prints, and then return the drum units to this machine. Reference
		Refer to the master making unit operating instruc- tions.

If the LCS Does Not Operate as You Want

Problem	Cause	Solution
The red indicator is blinking.	Paper remains in the interme- diate feeding section.	Remove the paper, and then press the up button.
The input tray does not go up when the up button is	There is no paper loaded in the input tray.	Load paper.
pressed.	A sheet of paper remains in the intermediate feeding section.	Remove the paper.
	The cover release lever is not locked.	Lock the cover release lever.
	If the input tray does not move after 15 seconds, after eliminat- ing the causes above, contact your service representative.	
The red indicator is lit.	_	Turn the power off, and then back on. If the red indicator is still lit, contact your service representative.

Loading Paper

Loading Paper into the Paper Feed Tray

Limitation

- Load paper when the paper feed tray is empty. Do not add paper when some paper is left in the tray. Doing so may cause problems, such as multiple feeds and misfeeds.
- □ If you use a variety of paper while printing, a print shadow might appear.

Reference

For available paper sizes, \Rightarrow p.21 "Print Paper".

Load the paper in the Paper feed tray.



🖉 Note

□ Correct any paper curl before loading the paper.

2 Adjust the paper feed side plate to match the paper size.



Loading Paper into LCIT

If paper runs out while printing, the green indicator blinks and the input tray goes down. Replenish paper in the input tray.

Load paper.



🖉 Note

The leading edge of the paper must touch the inside of the LCIT.

2 Press the up button.

The input tray goes up, and a sheet of paper is fed into the intermediate feeding section. The green indicator lights.



When the Add Ink Indicator (📥) Lights

The **Add Ink** indicator (ڬ) lights when it is time to supply ink.

A CAUTION:

• If ink comes into contact with your eyes, rinse immediately in running water. For other symptoms, consult a doctor.

A CAUTION:

• Keep the ink or ink container out of reach of children.

A CAUTION:

• If ink is ingested, induce vomiting by drinking a strong saline solution. Consult a doctor immediately.

A CAUTION:

 Our products are engineered to meet high standards of quality and functionality, and we recommend that you use only the expendable supplies available at an authorized dealer.

🖉 Note

- □ Be sure to supply ink of the same color as the current drum.
- □ Ink is readily removed from skin by waterless hand cleaners followed by washing with soap and water.
- □ Be careful not to get any ink on your clothing.
- □ Store ink under low temperature and humidity conditions.
- Do not store ink where it will be exposed to heat or direct sunlight.
- $\hfill\square$ Store on a flat surface.

- **1** Open the front door.
- **2** Pull out the ink holder.





4 Remove the cap of the new ink cartridge.



5 Insert the new cartridge into the ink holder.



🖉 Note

□ Always supply ink of the same color.

6 Return the ink holder to its original position until it clicks.



7 Close the front door.

The machine will start idling to supply ink to the drum.

№ Clearing Misfeeds

A CAUTION:

 Be careful not to cut yourself on any sharp edges when you reach inside the machine to remove misfed sheets of paper or masters.

🖉 Note

- □ After clearing misfeeds, make sure that all the doors, covers, and units are closed and the **%** indicator is off.
- To prevent misfeeds, do not leave any torn scraps of paper in the machine.
- When clearing misfeeds, do not turn off the main switch. If you do, your print settings will be cleared.
- □ If misfeeds occur repeatedly, please contact your service representative.

Paper Misfeed in the Paper Feed Section

PAPER FEED JAM REMOVE PAPER

MISFED REGISTRATION REMOVE PAPER

Remove the misfed paper.



\overline{Q} To prevent paper misfeeds:

Check the following before restarting the printing run.

• Did you select an appropriate paper type with the **(Ppr.Type)** key?

PAPER TYPE 1:STD 2:THICK 3:SPL **

• Are the side pads in the correct positions?



To print on thin paper $(52.3g/m^2, 13.9 \text{ lb})$, slide the levers behind the paper feed side plates in the direction of the arrow (see illustration).

• When paper is curled, correct the curl as shown.



• When paper edges stick together or paper is not fed in, shuffle the paper as shown.



 When printing onto envelopes or thick paper, lower the printing speed. ⇒ p.32 "Changing the Printing Speed".



• When a multi-feed occurs or the paper is skewed, make sure that the paper feed side plates are properly adjusted. When you load paper on the paper feed tray, make sure that the paper edge touches the back fence and paper is placed on the proper paper size scale. Only use paper where the leading edge has two right angle corners.

.

Paper Misfeed in the Paper Feed Section

REGISTRATION JAM REMOVE PAPER

- Open the front door.
- **2** Lower drum unit lock lever B1.



1 Take out the drum.





🖉 Note

□ For how to take out the drum unit, \Rightarrow p.9 "Changing the Drum Unit".

Pull out the misfed paper gently from the inside.



5 If you cannot remove the misfed paper from the inside, remove from the Paper feed tray.



5 Set the drum unit and close the front door.

To prevent paper misfeeds:

 \Rightarrow p.51 "Paper Misfeed in the Paper Feed Section".

Paper Wrapped around the Drum

When paper is wrapped around the drum



- Open the front cover.
- **2** Lower drum unit lock lever B1.



1 Take out the drum.





🔗 Note

□ For how to take out the drum unit, \Rightarrow p.9 "Changing the Drum Unit".

Remove the misfed paper from the drum.



- **5** If you cannot find misfed paper in step **0**, remove misfed paper from the press roller.
- **5** Set the drum unit and close the front door.

When paper is misfed inside the machine

DRUM1:DELIVERY JAM REMOVE PAPER

1 Open the front cover.

2 Lower drum unit lock lever B1.



B Take out the drum.





🖉 Note

- □ For how to take out the drum unit, \Rightarrow p.9 "Changing the Drum Unit".
- 4 Remove the misfed paper from the inside as shown in the illustration.





5 If you cannot remove the misfed paper, remove paper from the press roller.

Set the drum unit and close the front door.

$\sqrt[n]{}$ To prevent paper misfeeds:

If the paper is curled or the original's leading edge margin is too narrow, the following action is necessary.

• When you use curled paper, correct the curl as shown.



• If you want to know more details about leading edge margin, refer to the master making unit's operating instructions.

Paper Misfeed in the Paper Exit Section

Slowly but firmly pull out the misfed paper.



\heartsuit To prevent paper misfeeds:

When a thin paper misfeed in the paper exit section occurs, reduce the printing speed with the $[\triangleleft] [\triangleright]$ {**Speed**] keys (\Rightarrow p.32 "Changing the Printing Speed"). If you cannot reduce the printing speed move the end plate toward the paper delivery tray edge.

When Paper Misfeeds in the LCIT

1 Turn the cover release lever to unlock the cover of the intermediate feeding section.

The red and green indicators blink.



2 Open the cover, and then remove the paper.



🖉 Note

- If you open the cover, be sure to remove the paper even if it is not misfed.
- □ When opening the cover, always hold the handle to prevent the cover from dropping and causing an injury.
- When small size paper is misfed and cannot be removed, detach the LCIT, and then remove the paper.

3 Close the cover, and then move the cover release lever back to the original position.

The red indicator goes off.



🖉 Note

□ If a paper misfeed message appears on the machine, remove the paper misfed in the machine also.

4 Press the up button.



The input tray goes up and a sheet of paper is fed into the intermediate feeding section. The green indicator stops blinking and stays lit.

□/•When the Open Cover/Unit Indicator Lights

A message is displayed explaining the place where the doors/covers are not properly closed.

Front door

Close the front door completely.



Optional LCIT Unit

① Close the LCIT Unit cover.



(2) Move the cover release lever back to the original position.



Optional LCOT Unit

Lower the end plate arm.



3

Poor Printing

Dirty Background

If the background of prints is dirty, the drum unit might be dirty.

A CAUTION:

 If ink comes into contact with your eyes, rinse immediately in running water. For other symptoms, consult a doctor.

A CAUTION:

 Keep the ink or ink container out of reach of children.

A CAUTION:

 If ink is ingested, induce vomiting by drinking a strong saline solution. Consult a doctor immediately.

A CAUTION:

 If your skin comes into contact with ink, wash the affected area thoroughly with soap and water.

🖉 Note

- To avoid getting dirty background prints when printing onto paper smaller than the original image, select a suitable reduction ratio or use larger print paper.
- When printing onto paper that does not absorb ink well, the background of prints might get dirty. In this case, lower the printing speed or use Skip Feed mode to dry the ink on the prints.

1 Open the front cover.

2 Pull out the drum unit.



🖉 Note

- □ For how to take out the drum unit, \Rightarrow p.9 "Changing the Drum Unit".
- B While pressing the drum lock, turn the drum until you can see the trailing edge of the master.



4 With a dry soft cloth, remove any ink that has accumulated on the trailing edge of the drum unit.



∰Important

Do not use benzine, thinner, or other organic liquids—doing so can damage the machine.

5 Turn the drum unit and lock it until it click after cleaning it.



1 Insert the drum unit until it locks in position, then lower the drum unit lock lever.



When the Press Roller is Dirty

If the background of prints is dirty, the Press Roller might be dirty.

Make several prints until clear image appears.

🖉 Note

□ If the print is still dirty, contact your service representative.

Faint Prints

If the machine is not used for a long period of time or you change the color drum unit, the ink on the drum might dry causing print quality to deteriorate. To solve this problem, set back your drum unit to the Master making unit and use Quality Start Mode. ⇒Refer to the Master Making Unit's Operating Instructions.

If the print density is still too light even when using Quality Start mode, remake the master. 3

When Prints Are Not Delivered in a Neat Stack

When Printing on Small Size Paper

Slightly lower the end plate to raise the screw.



2 Adjust the angle of the end plate by turning the screw clockwise or counterclockwise.



When paper sides do not stack neatly

Adjust the paper delivery side plates to a size a little larger than the paper size.



. .

When Multiple Sheets Are Fed at the Same Time

Follow the procedure below to correct a multiple sheet feed problem of the LCIT.

1 Adjust the feeding pressure lever of the LCIT according to the thickness of the paper loaded.



🖉 Note

The appropriate feeding pressure lever positions according to the weight of the paper are as follows.

	Metric version	Inch ver- sion
Thick	127.9 – 209.3 g/m ²	34.0 – 55.6 lb.
Standard	52.3 – 127.9 g/m ²	13.9 – 34.0 lb.
Thin	47.1 - 52.3 g/m ²	12.5 – 13.9 lb.

- If multiple sheets of paper are fed at the same time when the feeding pressure lever is set to Standard, set the feeding pressure lever to Thin.
- □ If paper is not fed at all when the feeding pressure lever is set to Thin, set the feeding pressure lever to Standard.
- □ Paper heavier than 127.9 209.3 g/m² (34.0 55.6 lb.) is categorized as thick paper. However, for B5 paper heavier than 127.9 g/m² (34.0 lb.), set the feeding pressure lever to Standard.
- 2 If the problem still persists, take the paper out and fan it before loading it again.



4. Remarks

Do's and Don'ts

A WARNING:

• Keep the machine away from flammable liquids, gases, and aerosols. A fire or an electric shock might occur.

A CAUTION:

• Unplug the power cord from the wall outlet before you move the machine. While moving the machine, you should take care that the power cord will not be damaged under the machine.

∰Important

- While printing, do not turn off the main switch.
- While printing, do not unplug the power cord.
- While printing, do not open the door or covers.
- While printing, do not move the machine.
- Open and close the door and covers softly.
- When printing onto paper that contains images on the back, make sure there is a 10mm (0.4") margin at the back leading edge. If there is no margin, the machine might incorrectly detect that paper is wrapped around the drum and stop printing ⇒Refer to the Master Making Unit's Operating Instructions.
- When you use envelopes or pasted print paper, the leading edge of print might be damaged.
- Make sure to make a few trial prints to check the image position because the image position of the trial print might not correspond with that of the original.
- The leading edge of the prints might become stained if the edge touches the image of prints on the paper delivery tray.
- Print ink on the paper delivery tray might stick to the back side of the next print.
- Press the **[Proof]** key to perform a test print as the image density of the first few prints might be light.
- When the machine is on and the power source is less than 90% of the specified amount, printing quality will decrease. Therefore, make sure the supply from your electrical outlet is at least 90% of the required amount.
- When printing a large solid area on A3, 11" × 17" paper, the sides of the print tend to curl up after the print is fed out to the paper delivery tray. The next sheet that feeds out pushes against the curled sheet and a paper misfeed occurs. In this case, slow the printing speed down.

- When you make a lot of prints from a small image, ink might ooze out from the edges of the master, especially under high temperature and when printing in two or more colors. In this case, make a new master.
- Large uneven solid image wrinkles the master and you may not print as you want.

Where to Put Your Machine

Environment

Your machine's location should be carefully chosen because environmental conditions greatly affect its performance.

Optimum environmental conditions

A CAUTION:

- Keep the machine away from humidity and dust. Otherwise a fire or an electric shock might occur.
- Do not place the machine on an unstable or tilted surface. If it topples over, an injury might occur.

A CAUTION:

• If you use the machine in a confined space, make sure there is a continuous air turnover.

A CAUTION:

- After you move the machine, use the caster fixture to fix it in place. Otherwise the machine might move or come down to cause an injury.
- Temperature: 10 30°C, 50 86°F
- Humidity: 20 90% RH
- A strong and level floor.
- The machine must be level within 5mm, 0.2" both front to rear and left to right.
- Be sure to locate this machine in a large well ventilated room that has an air turnover of more than 30m³/hr/person.

Environments to avoid

- Locations exposed to direct sunlight or strong light (more than 1500 lux).
- Locations directly exposed to cool air from an air conditioner or heated air from a heater (sudden temperature changes might cause condensation within the machine).
- Places where the machine might be subjected to frequent strong vibration.
- Dusty areas.
- Areas with corrosive gases.

Power Connection

A WARNING:

- Connect the power cord directly into a wall outlet and never use an extension cord.
- Only connect the machine to the power source described in this manual
- Do not damage, break or make any modifications to the power cord. Do not place heavy objects on it. Do not pull it hard nor bend it more than necessary. These actions could cause an electric shock or fire.

A CAUTION:

• Unplug the power cord from the wall outlet before you move the machine. While moving the machine, you should take care that the power cord will not be damaged under the machine.

A CAUTION:

• When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).

Make sure the plug is firmly inserted in the outlet.

Machine Clearance

Place the machine near the power source, providing clearance as shown.

✤ Main frame



- *: Paper delivery tray
- 1. More than 10cm, 4.0"
- 2. More than 60cm, 23.7"
- 3. More than 60cm, 23.7"
- 4. More than 60cm, 23.7"

Maintaining Your Machine

To maintain high print quality, clean the following parts and units regularly.

* Cleaning the machine

Wipe the machine with a soft, damp cloth. Then wipe it with a dry cloth to remove the water.

#Important

- Do not use chemical cleaner or organic solvent, such as thinner or benzene. If they get into the machine or melt plastic parts, a failure might occur.
- Do not clean parts other than those specified in this manual. Such parts should be cleaned by your service representative.

Cleaning the Main Frame

Cleaning the paper feed roller

- Wipe off the paper dust on the paper feed roller with a damp cloth, then wipe it with a dry cloth.
 - Paper Feed Tray







🖉 Note

□ If you do not clean the paper feed roller, paper misfeeds tend to occur.

5. Specifications

Main Frame

- Configuration: Floor standing (with custom table or cabinet)
- Printing Process: Twin color press roller printing system
- Original Size & Printing Area: Refer to the Master Making Unit's Operating Instructions
- ✤ Print Paper Size: Maximum: 297mm × 432mm, 11.6" × 17.0" Minimum: 70mm × 250mm, 2.8" × 9.8"
- Leading Edge Margin: Refer to the Master Making Unit's Operating Instructions
- * Print Paper Weight:
 - 52.3 209.3g/m², 13.9 55.6 lb
- Print Speed: 90.105.120cpm (3 steps)
- Color Printing:

Drum unit replacement system

Image Position:

	Up&Down	Right&Left
Overall Image Adjustment	+10mm, 0.4" or -10mm, 0.4"	+15mm,0.5" or -15mm, 0.5"
Drum2 Image Adjustment	Moving sums of both adjust- ment functions(Max 10mm, 0.4")	+5mm, 0.2"or –5mm, 0.2"

✤ Paper Size and Paper Capacity:

1,000 sheets ($80g/m^2$, 20 lb)

Paper Delivery Tray Capacity:

1,000 sheets $(80g/m^2, 20 lb)$

bimensions (W \times D \times H):

	Width	Depth	Height
Stored	940 mm, 37.0"	630 mm, 24.8"	590 mm, 23.2"
Set up	1,620mm, 63.8"	630 mm, 24.8"	555 mm, 21.9"

✤ Weight:

• Machine: Less than 90 kg, 198.4 lb

Noise Emission *1:

Sound Power Level

	Printing Speed	Noise Emission
During printing	90cpm	78dB(A)
	105cpm	80dB(A)
	120cpm	82dB(A)
Stand-by		47dB(A)

Sound Pressure Level*2

	Printing Speed	Noise Emission
During printing	90cpm	65dB(A)
	105cpm	68dB(A)
	120cpm	69dB(A)

*1 The above measurement made in accordance with ISO 7779 are actual value. *2 It is measured at the position of the operator.

* Power Consumption:

• Printing: 0.55kW(Max)

Option

Large Capacity System

* Configuration:

Optional large paper capacity system

Paper type:

Corresponds to the machine specification

Printing paper size:

• LCIT:

Maximum 297 \times 432 mm, 11.6" \times 17.0" (325 \times 447 mm, 12.7" \times 17.5" *1) Minimum 128 \times 182 mm, 5.1" \times 7.1"

• LCOT:

Maximum 297 \times 432 mm, 11.6" \times 17.0" (325 \times 447 mm, 12.7" \times 17.5" *1) Minimum 70 \times 148 mm, 2.8" \times 5.9" (When the LCIT is installed: 128 \times 182 mm, 5.1" \times 7.1")

^{*1} When the image position is set to 0 mm (0").

Print paper weight:

47.1 – 209.3 g/m², 12.5 – 55.61 lb.

* Feed tray capacity:

3000 sheets (80 g/m², 20 lb.) Paper stack height: Less than 320 mm (12.5")

✤ Output tray capacity:

3000 sheets (80 g/m², 20 lb.) Paper stack height: Less than 345 mm (13.5")

Print speed:

Corresponds to the machine specification

Power consumption:

Standby	Less than 25 W
Printing	Less than 88 W

Dimensions (W×D×H):

- LCIT: 968 × 545 × 778 mm (38.1" × 21.4" × 30.6")
- LCOT: 560 × 512 × 778 mm (22" × 20.1" × 30.6")

✤ Weight:

- LCIT: Less than 45 kg, 99 lb.
- LCOT: Less than 30 kg, 66 lb.

Other Option

Drum unit: Color Drums A3, 11" \times 17"

🖉 Note

□ Specifications are subject to change without notice.

Consumables

Name	Size	Remarks
Ink-Black	1,000ml/pack	Environmental conditions: -5 to 40°C 10 – 95% RH
Ink-Red	1,000ml/pack	
Ink-Blue		
Ink-Green		
Ink-Brown	-	
Ink-Purple		
Ink-Yellow		
Ink-Navy		
Ink-Maroon		
Ink-Teal		
Ink-Orange		
Ink-Gray		
Ink-Violet		
Ink-Hunter green		
Ink-Burgundy		
Ink-Gold	1	
Ink-Reflex Blue		

🖉 Note

□ Specifications are subject to change without notice.

INDEX

[⊲][⊳][△][⊽], 5

A

accessing the user tools, 35 Add Ink Indicator (也), 49 adjusting the position of printed images, 30 Auto Off, 36 Auto Reset Time, 36

В

buffer fins, 2 Buzzer Off, 36

С

changing the printing speed, 32 Chocks, 12 chocks, 2 clearing misfeeds, 51 [Clear Modes/Energy Saver] key, 5 [Clear/Stop] key, 5 [Clear/Stop] key, 5 Clr Resettable Count, 36 consumables, 73 Control Panel, 1 control panel, 5 Cover, 3 Cover release lever, 3

D

dirty background, 58 Down button, 3, 4 Drm Stp Mode, 37 Drum unit, 9 drum unit handle B2, 9 drum unit lock lever B1, 2

Ε

End plate, 4 End plate screw, 4 environment, 65

F

Feeding pressure lever, 3, 61 front door, 1

I

Indicators, 3 ink, 49, 73 ink holder, 2 Input tray, 3 Installing the LCIT, 14 Intermediate feeding section, 3

J

Jump Table, 37

Κ

keys, 5

L

Large capacity input tray, 3 Large capacity output tray, 4 Large Capacity System, 3, 4 LCIT, 3 *Uninstalling the LCIT*, 19 LCIT release lever, 3 LCOT, 4 *Preparing the LCOT for Printing*, 17 LCS, 3 Loading Paper, 10, 16 loading paper, 47 Loading Paper into LCIT, 47 Loading Paper into the Paper Feed Tray, 47 Long Sheet Mode, 37

Μ

machine clearance, 66 machine exterior, 1 machine interior, 2 main switch, 2 maintaining your machine, 67 Max Print, 36

Ν

Number keys, 5

0

Open Cover/Unitindicator, 57 Options, 3 Output tray, 4

Paper Recommended for the LCIT, 23 Recommended for the LCOT, 23 Paper alignment wings, 12, 18 paper alignment wings, 2 paper delivery end plate, 2 Paper delivery end plate knob, 2 Paper delivery side plate knobs, 2 paper delivery side plates, 2 paper delivery tray, 2 paper feed side plates, 1 Paper feed side plates knob, 1 Paper feed tray, 1 Paper feed tray down key, 1 paper misfeed in the paper feed section, 51, 52 paper feed tray for the feed section for feed section for feed section feed sectio

paper misfeed in the paper feed section, 51, 52 paper or master wrapped around the drum, 53 Paper Type, 27 poor printing, 58 power connection, 66 Power switch, 3 [**Print]** key, 5 print paper, 21, 27, 47

Q

[#]key, 5

[Proof] key, 5

R

Remarks, 63 Resettable Count, 36

S

Safety Information, i service call, 43 Setting and Changing the Drum Unit, 7 Setting up the paper delivery tray, 11 Side guide adjustment knob, 3, 4 Side guides, 3, 4 Side guides, 3, 4 Side guide screw, 3 **[Skip Feed]** key, 5 Skip Feed printing, 33 Skip Number of Time, 37 Special kinds of Paper, 27 specifications, 69 standard paper, 27 standard printing, 24 System, 36 thick paper, 27 Total Counter, 36 trailing edge guides, 2 troubleshooting, 43 Turning On the Power, 15

U

Up button, 3, 4 user codes, 39 user tools, 35, 36 **[User Tools]** key, 5 Using the LCIT and LCOT, 14 Using the Paper Feed Tray and Delivery Tray, 10

W

what you can do with this machine, v When Paper Misfeeds in the LCIT, 56 when the image density is too light, 59 where to put your machine, 65 []] [>] keys (Speed keys), 5 MEMO



In accordance with IEC 60417, this machine uses the following symbols for the main switch:

means POWER ON.

O means POWER OFF.

TC-IIR Operating Instructions





Printed in Japan EN USA C639-8602